

MID AMERICA



MOTORWORKS

Pursue your passion here

Suggested Installation Instructions for:
609-711, 1975-1996 Locking Gas Cap

THIS FUEL CAP MAY BE USED AS A REGULAR FUEL CAP OR A LOCKING FUEL CAP.

To install as a locking gas cap: Insert cap and rotate RIGHT until top of cap 'clicks'. Hold cap top and insert key. Rotate key RIGHT 1/2 turn. Remove key. When locked, top of cap will spin freely.

To remove: Hold cap and insert key. Rotate key to LEFT 1/2 turn. Remove key. Cap can now be rotated LEFT to remove. DO NOT USE KEY TO ROTATE CAP.

To install as a regular gas cap: Remove key. Rotate clockwise until cap 'clicks' 3 times.

To remove: Rotate cap counter clockwise.

CAUTION: Remove your cap SLOWLY. Fuel spray may cause serious injury. DO NOT remove with your face above or near cap.

Please record key number in safe place. In the event of a lost key or additional keys call 618-262-8868.