Pursue your passion here

## Suggested Installation Instructions for: 609-713, 1997-2004 Locking Gas Cap

## THIS FUEL CAP MAY BE USED AS A REGULAR FUEL CAP OR A LOCKING FUEL CAP.

To Install:

Insert cap and rotate RIGHT until top of cap 'clicks'. Hold cap top and insert key. Rotate key RIGHT 1/2 turn. Remove key. When locked, top of cap will spin freely.

To Remove:

Hold cap top and insert key. Rotate key to LEFT 1/2 turn. Remove key. Cap can now be rotated LEFT to remove.

DO NOT USE KEY TO ROTATE CAP.

CAUTION:

Remove your cap SLOWLY. Fuel spray may cause serious injury. DO NOT remove with your face above or near cap.