

Pursue your passion here®


## Suggested Installation Instructions for: 614-876, 618-767, 619-055, 619-065, 628-673, 638-170, 638-572, 638-607 Corvette Third Brake Light


Count on Mid America Motorworks for all your Corvette Parts and Corvette Accessories

## **TOOLS REQUIRED:**

10mm Socket & Wrench 15mm Torx-Bit with Driver

- Using the Torx Driver, remove the two inner taillamps from both sides of the Third Brake Light. One screw holds each light to the fascia.
- 2. Remove (4) 10mm nuts that secure the Third Brake Light to the fascia. You can access two nuts from each opening on either side of the Third Brake Light.
- 3. To unplug the electrical connector from the Third Brake Light, lift up on the tab and unseat the connector.
- 4. Gently lift the Third Brake Light off of the fascia.
- 5. Repeat steps 3 through 1 to install the Third Brake Light.

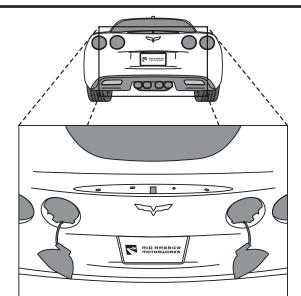

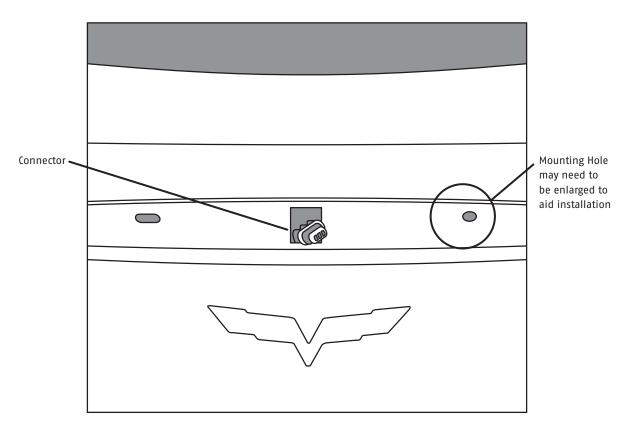

Mid America Motorworks, #1 Mid America Place, P.O. Box 1368, Effingham, IL 62401

800.500.1500 · Worldwide: 217.540.4200 · FAX: 217.540.4800 · www.mamotorworks.com · mail@mamotorworks.com