



Application: 1977 - 1982 Corvette



Search: *Interior Trim, Door Panels, Sunvisors*
www.mamotorworks.com

Part Includes
1 - Sun Visor

Sunvisor, Sierra Grain Solid Vinyl



Tools Needed



REMOVAL OF YOUR ORIGINAL SUN VISOR

STEP 1.

Check your new visor to ensure it is the correct color and style for your Corvette. Each visor includes a new visor pin and a visor pin retaining clip.

STEP 2.

Remove your T-tops to gain access to the top of the windshield frame.

STEP 3.

Next to the hole for the T-top alignment pin, there is a small, round plug or cap that covers the hole for the visor pin. Using a small straight screwdriver, gently pry around the edge of this cap to lift it and gain access to the visor pin retaining clip.

STEP 4.

The visor pin is held in place by a spring and retaining clip. It is necessary to remove the retaining clip to remove the pin. The star shaped prongs in the center of the circular retaining clip catch on the under side of the rings on the end of the visor pin. To remove the retaining clip, use a small screwdriver to bend some of the prongs on the retaining clip up and away from the pin and enlarge the opening in the center of the clip. Then use the needle nose pliers to reach in and remove the clip. Use caution as the clip is under spring pressure. With the clip removed, the visor pin can be pulled free from the bottom. Be sure to save the visor spring.



INSTALLATION OF YOUR NEW SUN VISOR

STEP 1.

Insert the ringed end of the visor pin up through the hole in the windshield frame, being sure that the taper on the pin seats firmly into the matching taper on the frame.

STEP 2.

Place the retaining spring over the ringed end of the visor pin in the hole in the windshield frame.



Mamotorworks



@CorvettePassion



MidAmericaMotorworks



CorvettePassion

2900 North Third Street, Effingham, IL 62401
800.500.1500 • Worldwide: 217.540.4200 • FAX: 217.540.4800
www.mamotorworks.com • generalmail@mamotorworks.com
©Mid America Motorworks, Inc. All rights reserved.



Description (cont.)

STEP 3.

Hold the visor in place and position the new visor pin retaining clip over the ringed end of the visor pin. Using a socket or nut driver approximately the same diameter as the retaining clip, push down on the retaining clip while pushing up on the visor pin from underneath so that it stays in the frame. Push down and compress the spring until the retaining clip goes over the first ring on the visor pin and catches under it. The spring will then apply pressure to the clip and pin to hold them in place.

STEP 4.

Place the hole dug in position and press into place to cover the hole and your installation is complete.