

**Application:** 1984–1992

## **INSTRUCTION SHEET**

### Part Number



Electrical System

Part Includes

1 - Component

# **Electric Relay Power Antenna**



Tools Needed

#### COUPE:

#### STEP 1.


To access the relay, open the rear hatch glass and remove the black rear plastic panel as shown in diagram.

#### STEP 2.

To remove the extra top panel's plastic handle, grasp the handle and pull upward. The handle will pop off allowing the panel to be removed.

#### STEP 3.

The antenna relay is to the driver's side of the rear hatch glass latch. The relay has two connectors. Push the lock tab in and pull the connector away from the relay.

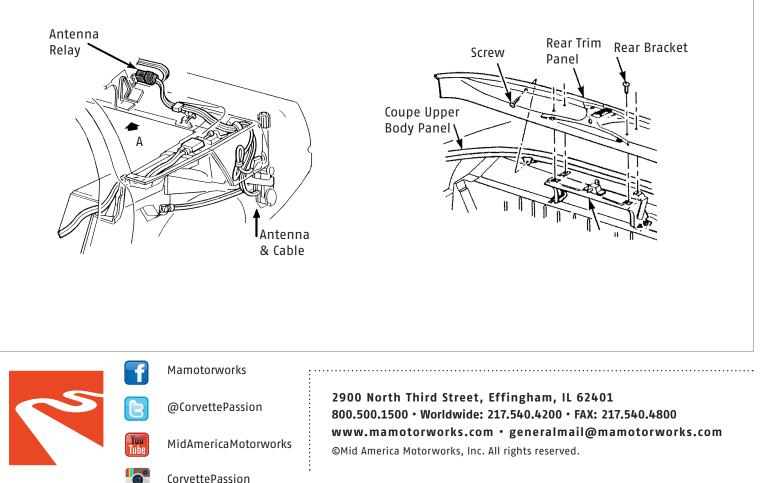



## **Description** (cont.)

#### COUPE:

#### STEP 1.

To access the relay, open the rear hatch glass and remove the black rear plastic panel as shown in diagram.


#### STEP 2.

To remove the extra top panel's plastic handle, grasp the handle and pull upward. The handle will pop off allowing the panel to be removed.

Page 2

#### STEP 3.

The antenna relay is to the driver's side of the rear hatch glass latch. The relay has two connectors. Push the lock tab in and pull the connector away from the relay.

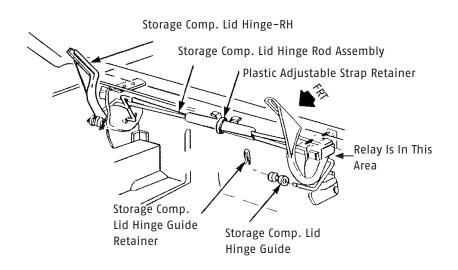

#### **CONVERTIBLE:**

#### STEP 1.

Lift up the rear top and raise the rear deck lid. The antenna relay is located by the left rear deck lid hinge to the body or in the floor area below the hinge to the body. Sometimes the relay is on the floor panel covered by tape.

#### STEP 2.

After the relay is changed, reposition it on top of the floor pan up by the center hinge bars. This helps prevent the relay from getting any moisture in it.