



Application: 1997-2004 Corvettes



Search: **C5 Interior LED Lighting Kits 1997-2004**
www.mamotorworks.com

 
C5 Interior LED Light Bulb Kit, 7 Pieces

Part Includes

- 2 - Footwell LED Bulbs
- 2 - Rear Hatch/Trunk LED Bulbs
- 1 - Glove Box LED Bulb
- 2 - White Rear License Plate LED Bulbs



Tools Needed

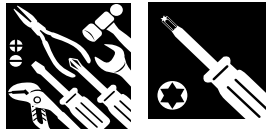

Step 1. Using a #15 Torx screwdriver, remove the 2 screws holding the license light in place.



Step 2. Remove the light housings, twist the grey socket 1/4 turn counterclockwise to remove it from the housing.



Step 3. The bulb may be hot, so use a shop towel to grab it and remove it.



Mamotorworks



@CorvettePassion



MidAmericaMotorworks



CorvettePassion

2900 North Third Street, Effingham, IL 62401
800.500.1500 • Worldwide: 217.540.4200 • FAX: 217.540.4800
www.mamotorworks.com • generalmail@mamotorworks.com
 ©Mid America Motorworks, Inc. All rights reserved.



Description (cont.)

Step 4. Turn on the lights. Plug in the LED bulb. If it doesn't light, turn it 180 degrees and re-insert. Once the LEDs are working reverse the above steps to re-install the light housings.

 


C5 Hatch/Trunk LEDs

Step 1. Pull the hatch/trunk light housing from the carpet to gain access to the back of the housing.



Step 2. Turn the bulb socket 1/4 turn counterclockwise to remove it. Pull the factory bulb out and insert the led. Replace the socket and lock it in place. If the LED doesn't light, remove the socket and turn it 180 degrees and re-insert it. It should now light. The lights will time out after about 15 minutes, so keep that in mind if it doesn't light. Push the housing back into the carpet and repeat procedure on the other side.

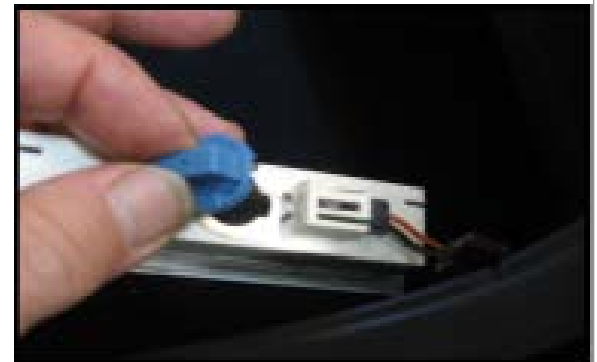




Description (cont.)

Footwell & Glove Box LEDs

Step 1. Using a flat blade screwdriver, carefully pry the footwell light housing out of the panel. Remove the factory light bulb. **DO NOT USE METAL OBJECTS TO REMOVE BULB TO AVOID BLOWING FUSE.** The bulb may be hot.



 Step 2. Install the LED bulb into light housing. If it doesn't light, remove and turn it 180 degrees and re-install. It should now light. Make sure the interior lights haven't timed out, which they will do every few minutes. Re-install light housing.

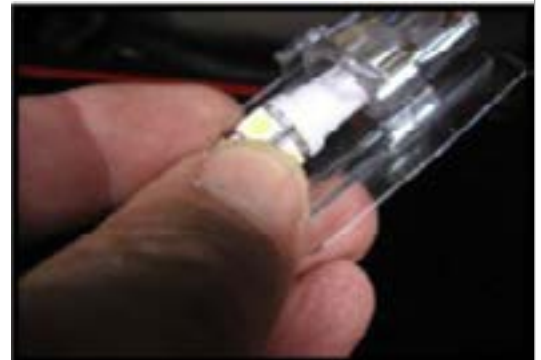

C5 Glove Box LED. Open the glove box and remove stock bulb from housing. Bulb may be hot. Install LED into housing. If it doesn't light, turn it 180 degrees and re-install.



C6 Glove Box LED. Open the glove box and locate this switch that holds the bulb. The red arrows show the 2 tabs on the back of the switch that need to be squeezed together to remove the switch. You can also disconnect the switch to make it easier. Remove factory bulb and insert LED bulb. If it doesn't light, turn 180 degrees and re-install. Reconnect the switch and re-install the switch in the panel.

