

## **INSTRUCTION SHEET**

**Part Number** 



## Application: 1997–2004 Corvettes



Step 1. Using a #15 Torx screwdriver, remove the 2 screws holding the license light in place.

Step 2. Remove the light housings, twist the grey socket 1/4 turn counterclockwise to remove it from the housing.

Step 3. The bulb may be hot, so use a shop towel to grab it and remove it.



.....





@CorvettePassion

CorvettePassion

MidAmericaMotorworks

2900 North Third Street, Effingham, IL 62401 800.500.1500 · Worldwide: 217.540.4200 · FAX: 217.540.4800 www.mamotorworks.com · generalmail@mamotorworks.com ©Mid America Motorworks, Inc. All rights reserved.









## Description (cont.)

**Step 4.** Turn on the lights. Plug in the LED bulb. If it doesn't light, turn it 180 degrees and re-insert.

**Step 5.** Re-insert bulb socket into housing and twist 1/4 turn clockwise. Re-attach housing with the 2 torx screws and repeat for the second housing.





Page **2**