

MID AMERICA




MOTORWORKS

Pursue your passion here

P.O. Box 1368 • Effingham, IL 62401 • Worldwide: 217-540-4200 • FAX: 217-540-4800
Call Toll-Free U.S. & Canada 800-500-1500 • Web: www.mamotorworks.com • Email: mail@mamotorworks.com

Suggested Installation Instructions for **100-873** Car Cover Lock

1. Insert end of plastic-coated steel cable through grommet until it is visible at the bottom of car cover.
2. Thread opposite end of cable through opening of other end to form a loop.
3. Pass remaining end under automobile and insert cable end through remaining steel grommet.
4. Lock end of cable to the cable itself to secure.

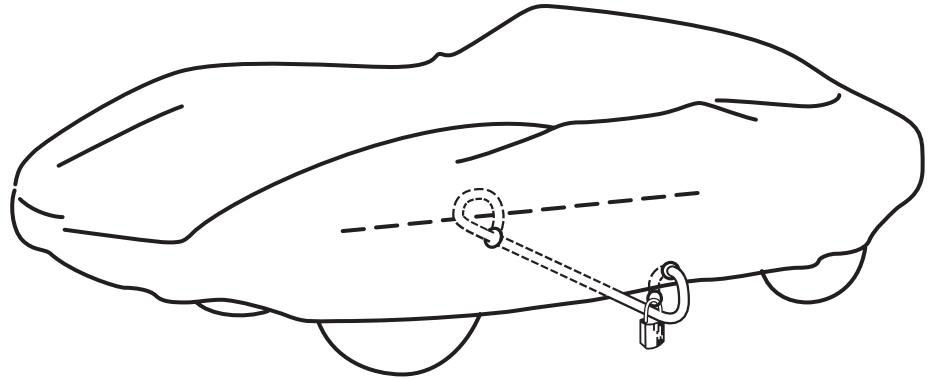

Form #100873-040322
Copyright 2004 Mid America Motorworks