



Suggested Installation Instructions for Product Number: 303-575, 303-576, 303-577, 303-578 VW Window Regulators

**NOTE: To ensure proper installation, please fit all parts before drilling, sanding, or painting.
Part cannot be returned after drilling, sanding, or painting has occurred.**

TOOLS REQUIRED:

Phillips Screwdriver

Flat Head Screwdriver

10mm Socket

Drift

DIRECTIONS FOR SAFE AND PROPER APPLICATION

1. Remove Door Panel
2. Remove bolts securing Window Regulator to door frame
3. With window in full up position remove bolts securing Door Glass to Window Regulator.
(See Figure A)
4. Have assistant hold Door Window in up position and remove old Window Regulator.
5. Compare and form new Window Regulator to shape and bends of your Original Unit. (See Figure B)
6. Verify new Window Regulator is adequately greased.
7. Slide Window Regulator into door.
8. Loosely install Regulator to Door Frame bolts. Once all bolts are in place final torque them.
9. Loosely install Door Window to Regulator bolts.
10. Roll Window down and back up then final torque Door Window to Regulator bolts.
11. Reinstall Door Panel



Figure A

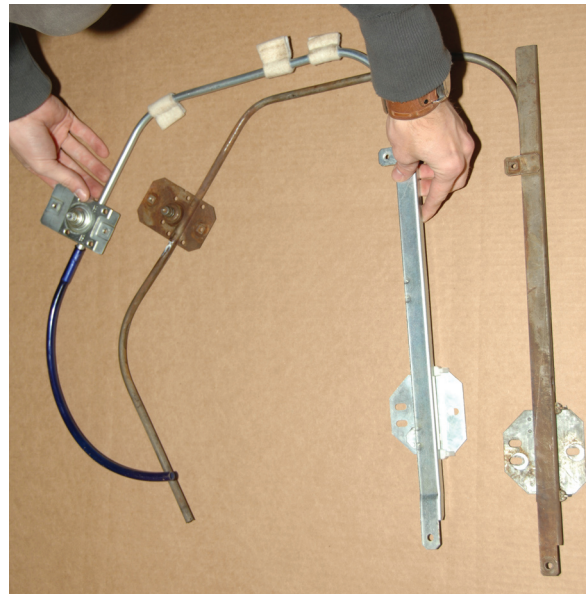


Figure B