





Pursue your passion here®

Suggested Installation Instructions for: 313-768 Universal Volkswagen Wiring Harness

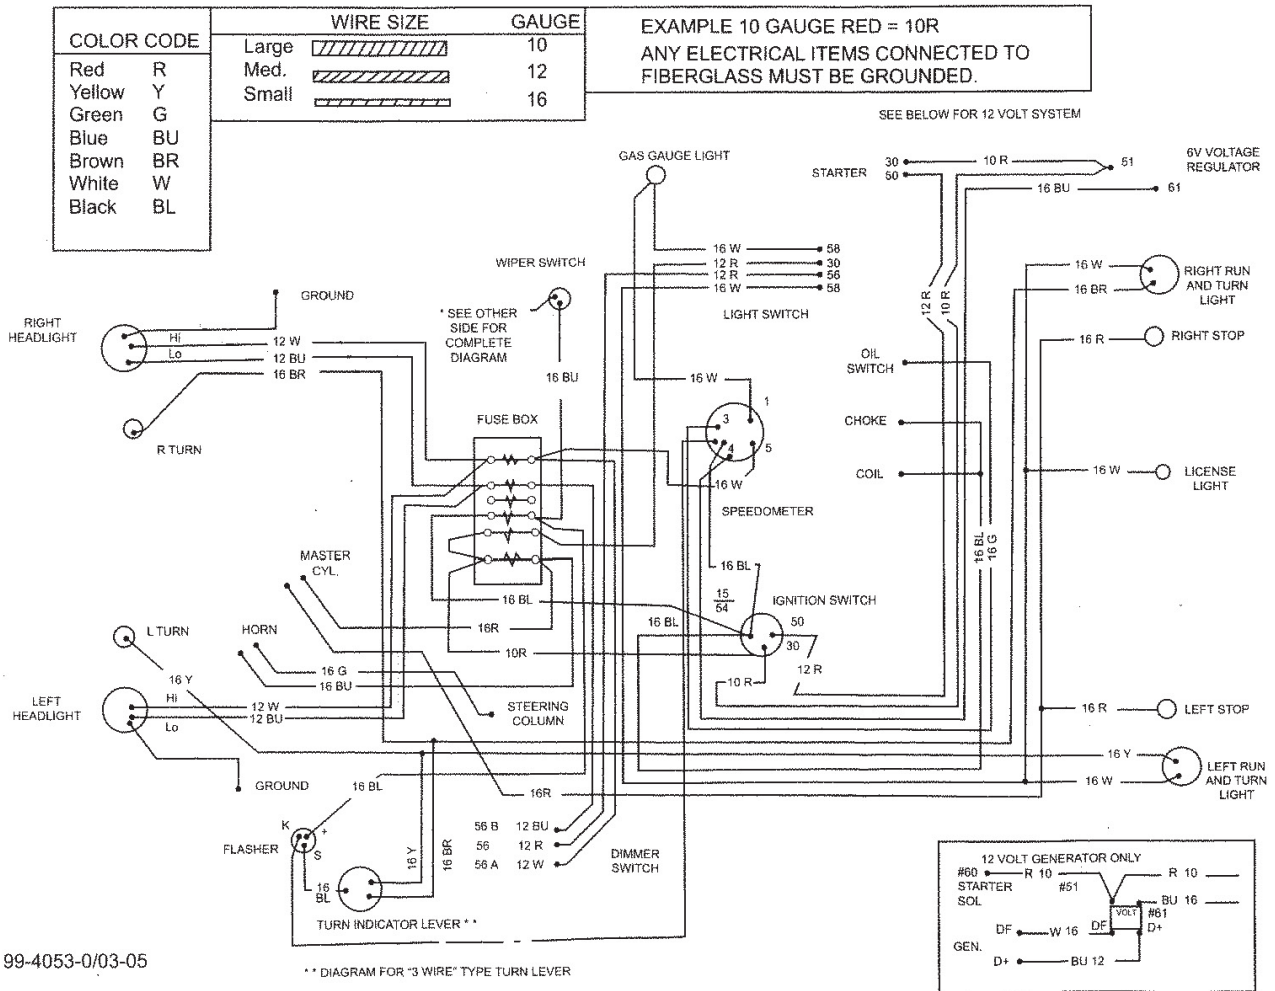

**WIRE DIAGRAM FOR
PARKING LITE - WIPER MOTOR - 4 LITE EMERGENCY FLASHER**

To install your Parking Lite, ground base of lamp to chassis. Use roll of 16 gage wire in fitting package to wire "HOT" from Park Lamps to Number 57 on Lt. Sw.

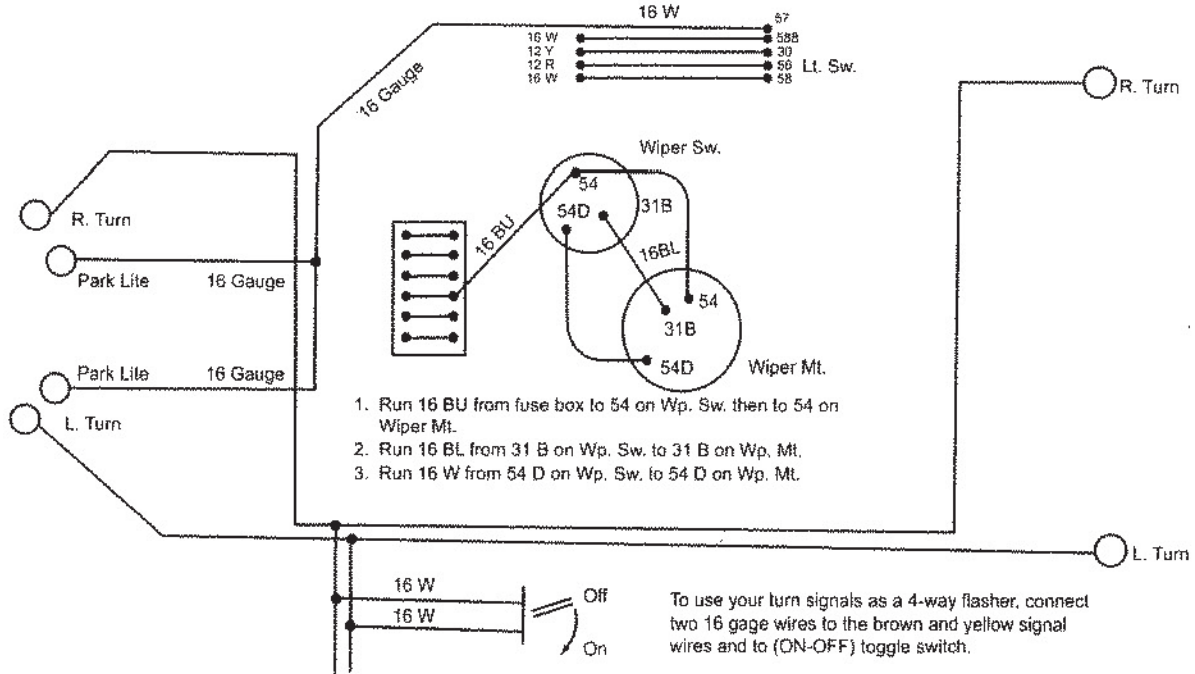

NOTE

To operate - turn toggle switch on & turn indicator to left or right turn position.