




Suggested Installation Instructions for:
602-068, 602-070, 602-072, 606-049, 606-050,
619-261, 619-262, 622-679, 636-012
Manual Shift Knob

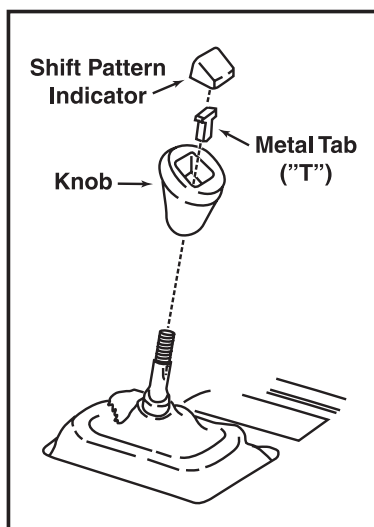

Removal

1. Remove shift pattern button with a small screwdriver wrapped with tape or cloth to prevent scratching original shift knob.
2. It may help to spray a small amount of light oil or WD-40 on the "Metal Tab." Pry on underside of "T-Tab" with a screwdriver while gripping and pulling up with needle nosed pliers.
3. Unscrew the factory knob.

Installation

1. Put the shifter base on the shifter stem.
2. Place the knob on the shifter stem and screw clockwise until it bottoms on the shifter stem. The new knob cuts its own threads as you rotate the knob into position.
3. Then tighten set screws with the allen wrench provided.
4. Tighten the shifter base clockwise until tight.

