



**Application:** Corvette 1965-1982

**Part Includes**

8 - Anti-Squeak Sleeves

## Anti-Squeak Brake Kit



**Tools Needed**

### ANTI-SQUEAK BRAKE INSULATOR KIT

**STEP 1.**

To install the Anti-Squeak Brake Insulator Kit without removing the brakes, rock the pad up and down while still inside the caliper.


**STEP 2.**

Slide (force) the sleeve down along the trailing edge of each pad as far as possible.

**STEP 3.**

Trim off excess.

**NOTE:** If noise persists, move sleeve from rear edge to front edge. Or, place a sleeve on both edges.

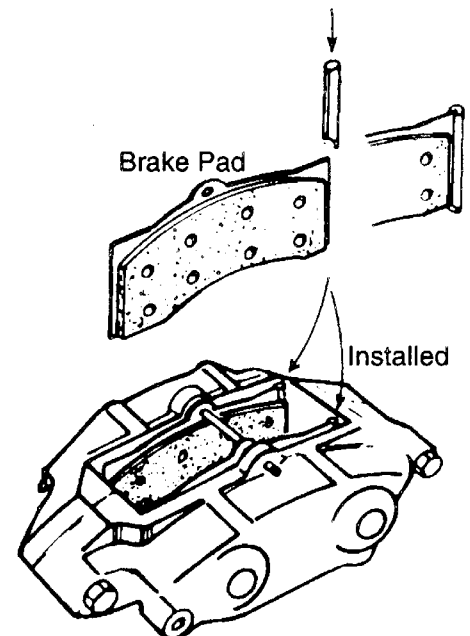

MAMotorworks



Midamotorworks



blog.autotainment.com

**17082 N. US Hwy 45, P.O. Box 1368, Effingham, IL 62401**  
**800.500.1500 • Worldwide: 217.540.4200 • FAX: 217.540.4800**  
**www.mamotorworks.com • mail@mamotorworks.com**

©Mid America Motorworks, Inc. All rights reserved.