




Suggested Installation Instructions for:
604-457, 604-458, 1968-1982 Power Window Motor Bracket

1. Remove door panel and access plate. CAUTION: Before removing the power window motor from the regulator, lock the arm as shown in diagram with small bolt. Remove power window motor from the regulator. If you think you can work in a limited space, the regulator can be dropped down into the door "access" area, and the bracket can be installed with regulator still partially attached to door and window.
2. With regulator removed or down in access area, drill out old rivets and install new bracket in same position as shown in picture.
3. Use all fasteners provided. Tighten nuts (use locktite® if desired). Reinstall regulator in door and attach window to regulator. Remove "Lock" bolt as described in step #1.
4. Window adjustment is usually necessary after removing regulator. Test window operation and fit prior to reinstalling door panel.

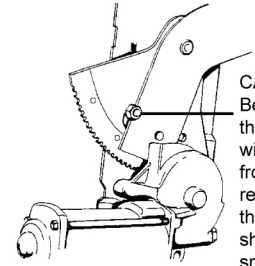

CAUTION:
Before removing the power window motor from the regulator, lock the arm as shown with small bolt.

