



Suggested Installation Instructions for #604-474 & #604-475, 1968-79 RH Mirror


Mid America Motorworks

#1 Mid America Place, P.O. Box 1368, Effingham, IL 62401
800.500.1500 • Worldwide: 217.540.4200 • FAX: 217.540.4800
www.mamotorworks.com • mail@mamotorworks.com

Form #604474-070702 Copyright 2007 Mid America Motorworks

Passenger's Side Mirror Replacement for 604-474 & 604-475: *(Please note that this installation is assuming there has never been a passenger side mirror installed on your vehicle. Passenger mirrors were originally a dealer-installed option.)*


- Step 1. Cut out and assemble template (on page 2). Tape the template to door as shown (see diagram, Item #1).
- Step 2. Mark centerpoints and remove template.
- Step 3. First, drill 1/8" pilot holes for well nut holes, then drill out to 3/8" allowing a snug fit for well nuts.
- Step 4. To center new gasket, a "loose" installation of the mounting bracket and mirror is required. To ease installation, preassemble mounting bracket with screws and well nuts. Place the new gasket on the door and insert the mounting bracket assembly over the gasket and into the door. Fit the mirror onto the mounting bracket and center the gasket around the mirror.
- Step 5. Carefully hold the gasket in place, remove the mirror and tighten screws into the mounting bracket. Mount the mirror onto the bracket using new allenhead screw.

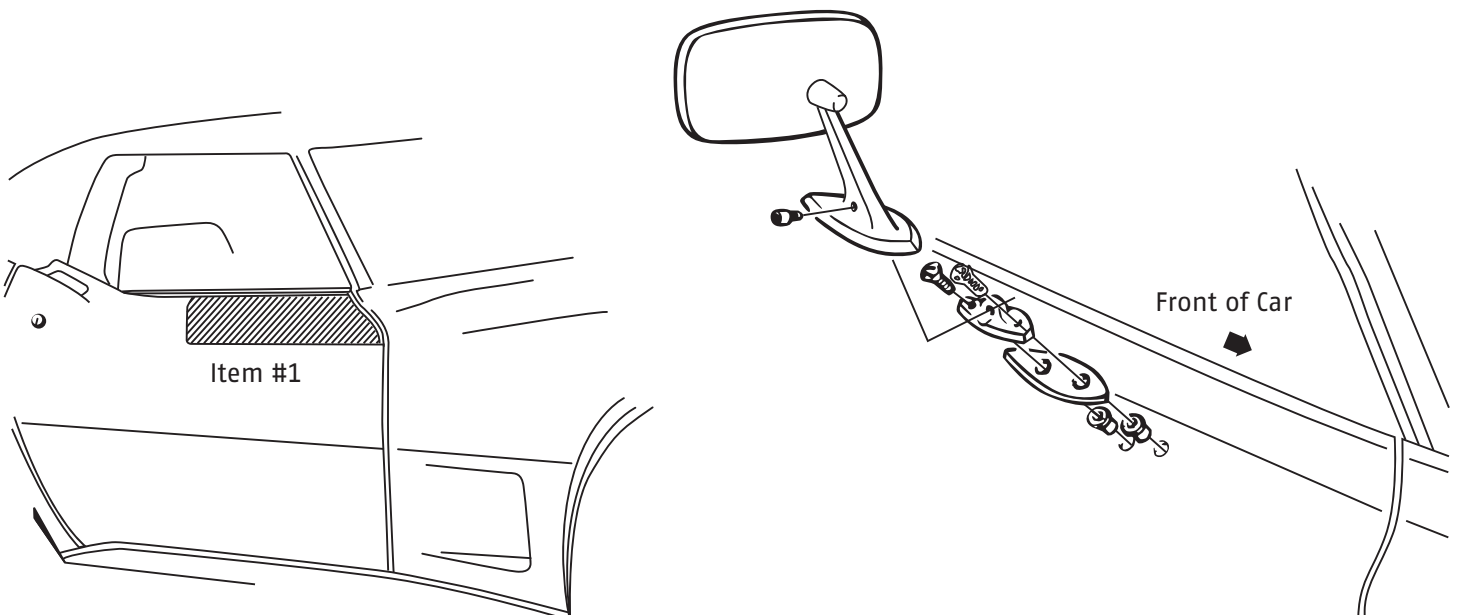

Installation Template for #604-474 & #604-475, 1968-79 RH Mirror

Form #604474-070702 Copyright 2007 Mid America Motorworks

IMPORTANT!
Due to variance in copier/printer duplication, please measure and verify the 1³/₄" dimension between mount hole centers on this template before drilling.

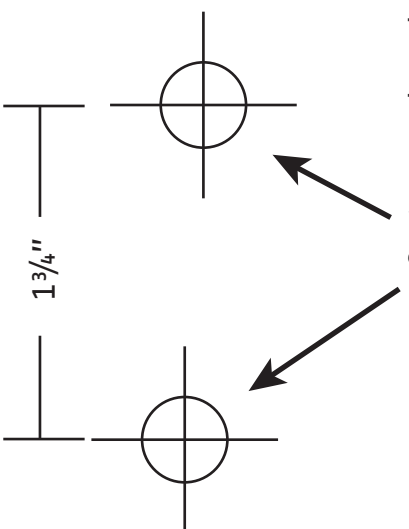

Center punch and drill 3/8 dia. hole

This Box Should Be 1" x 1"


Align with

Tape this edge (B) to edge A.

Edge B.

Measure the 1" x 1" box (in dotted lines) on each template piece to ensure your template is printed at the correct size. If incorrect, discard template and contact Mid America Motorworks.

Instructions: Trim out template and affix tape to join edge A to edge B

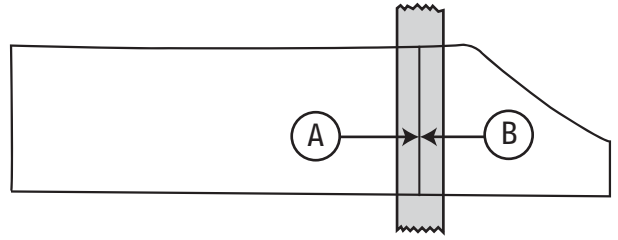

top of door

Tape this edge (A) to edge B.

Edge A.

Align with front edge of door

This Box Should Be 1" x 1"

