


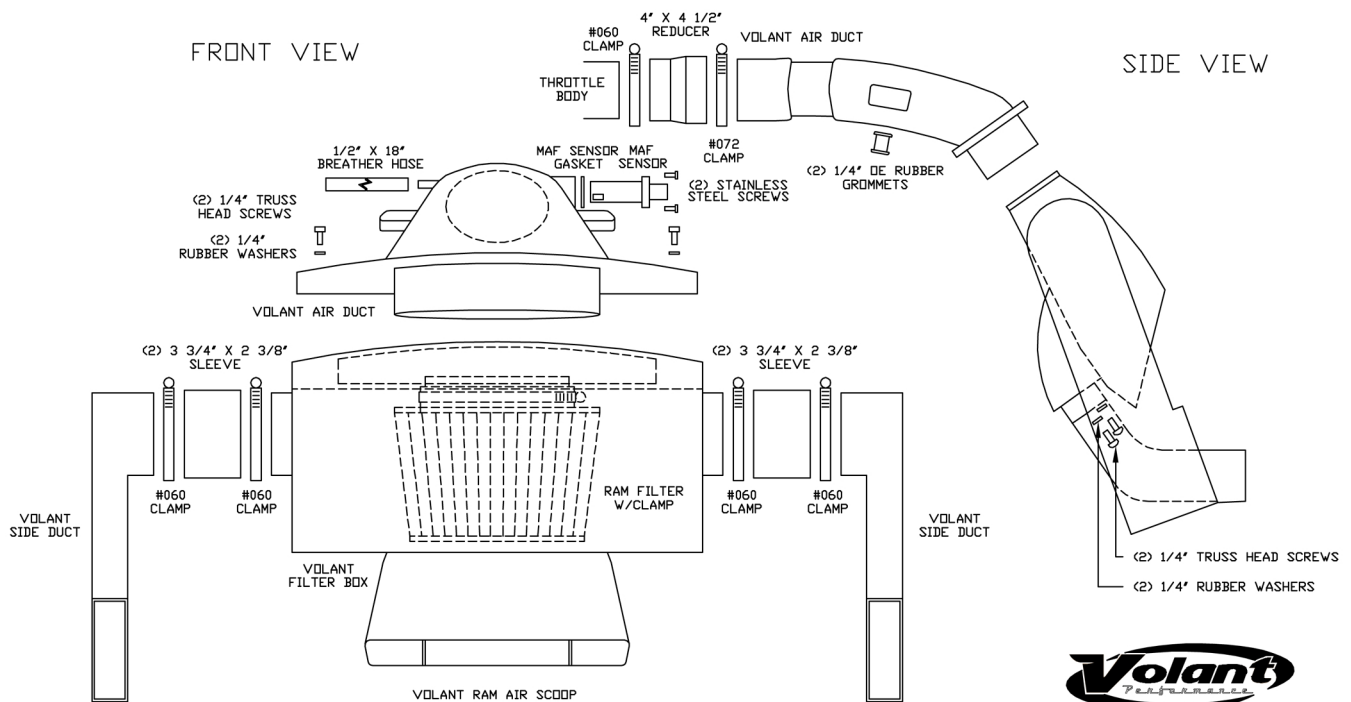

Suggested Installation Instructions for:

627-105

**Corvette Intake System by Volant, fits all 2008-2010
6.2L LS3 and 2006-2010 Z06 7.0L LS7**


- 1 - Volant Filter Box**
- 2 - Volant Air Duct**
- 1 - Volant Air Duct**
- 2 - Volant Side Ducts**
- 1 - Volant Ram Filter w/clamp**
- 5 - #60 Clamps**
- 1 - #072 Clamp**

- 4 - 1/4" Truss Head Screws**
- 4 - 1/4" Rubber Washers**
- 2 - 3 3/4" x 2 3/8" Sleeves**
- 1 - 3 3/4" x 3' Sleeve**
- 1 - MAF Sensor Gasket**
- 1 - 1/2" x 18" Breather Hose**
- 2 - Stainless Steel Screws**

