

Side Cove

Kit Contents

Description	Quantity
Side Cove Inserts (LH/RH)	2
Clips	4
Alcohol Wipes	2
Double Sided Tape	4
Installation Instructions	1

Tools Required

Trim Panel Remover

Vehicle Preparation

1. Temperature must be between 61°F-86°F (16°C-31°C)
2. For best results, vehicle should be free of damage (dents, scuffs, creases, fractures, etc)

Side Cove Installation

1. Remove front wheel.
2. Remove wheel house liner. Reference to shop manual.
3. Pull tab of inner bracket away from fender. See Figure 1A.
4. Remove adhesive tape and residue from the fender and bracket tab. Clean with alcohol wipe.
5. Install Side Cove insert between the fender and bracket. See Figure 1B.

FIGURE 1A


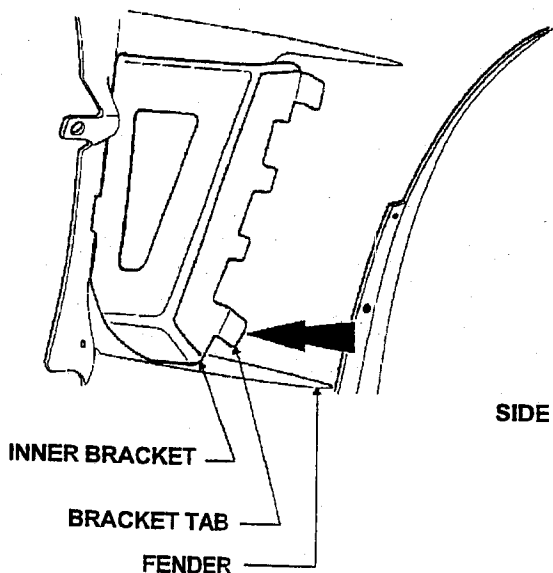


FIGURE 1B

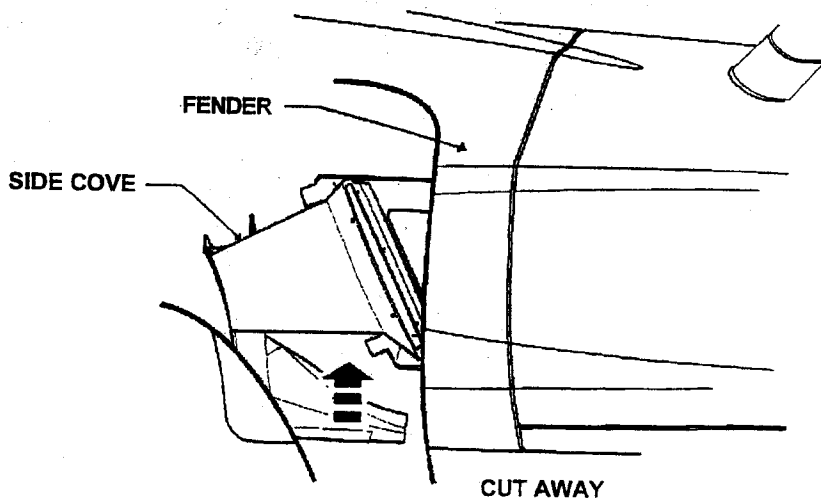

Chevrolet Corvette Side Cove

PART NO. **88967714** SHEET **1** OF **6**

ALL INFORMATION WITHIN ABOVE BORDER TO BE PRINTED EXACTLY AS SHOWN ON 8.5 x 11 WHITE 16 POUND NON-BOND RECYCLABLE PAPER. PRINT ON BOTH SIDES, EXCLUDING TEMPLATES. TO BE UNITIZED IN ACCORDANCE WITH GM SP0 SPECIFICATIONS.

DATE	REVISION	AUTH	DR	TITLE
15N004	Initial Release - Jeff Peterson			INSTALLATION INSTRUCTIONS Chevrolet Corvette Side Cove
05AP05	Revised - Jeff Peterson			
07AP05	Revised - Jeff Peterson			

PART NO. **88967714** SHEET **1** OF **6**

Side Scoop Installation

6. Clip side cove insert to the edge of bracket. See Figure 1C.
7. Apply double sided adhesive tape to the bracket tab. Remove tape liner and adhere tape to the fender.
8. Re-install wheel house liner. Ensure that the upper 2 edge pushpins also go through the holes on the side cove insert. See Figure 1D.
9. Re-install front wheel.
10. Repeat steps 1-9 for the other side.

FIGURE 1C


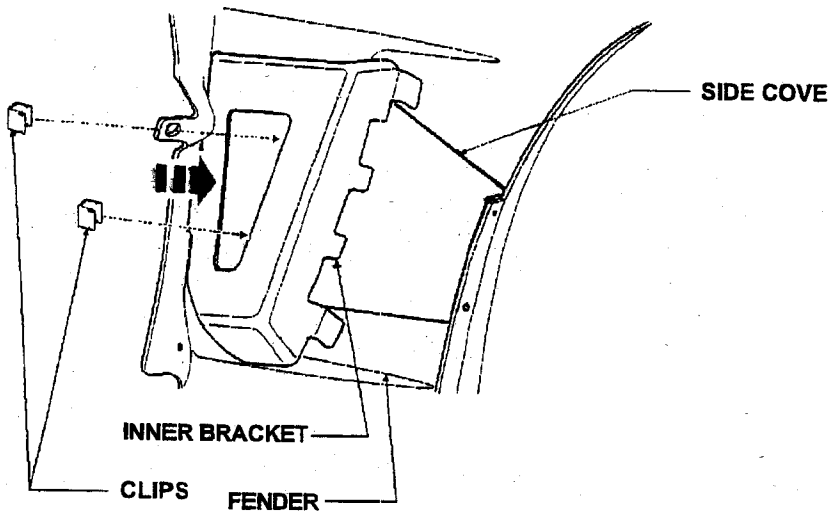


FIGURE 1D

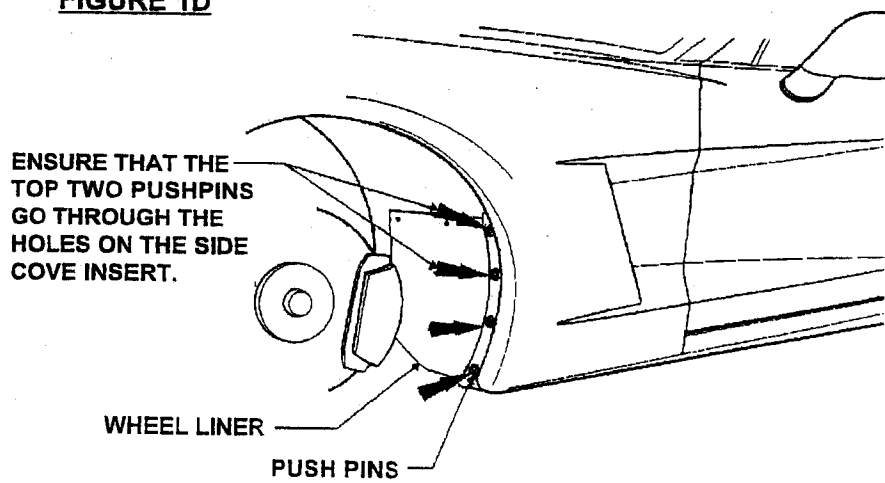

Chevrolet Corvette Side Cove

PARTNO. **88967714** SHEET **2** OF **6**

ALL INFORMATION WITHIN ABOVE BORDER TO BE PRINTED EXACTLY AS SHOWN ON 8.5 x 11 WHITE 16 POUND NON-BOND RECYCLABLE PAPER. PRINT ON BOTH SIDES, EXCLUDING TEMPLATES. TO BE UNITIZED IN ACCORDANCE WITH GMSPO SPECIFICATIONS.

DATE	REVISION	AUTH	DR	TITLE

INSTALLATION INSTRUCTIONS

Chevrolet Corvette Side Cove

PARTNO. **88967714** SHEET **2** OF **6**