



Application: 2005–2013 C6 Corvette

Part Includes

1 - Component

C6 Chrome Replacement Front Grille




Tools Needed




STEP 1.

Start by removing 5 screws at the bottom of the front bumper cover in front of the spoiler using a 7mm socket.

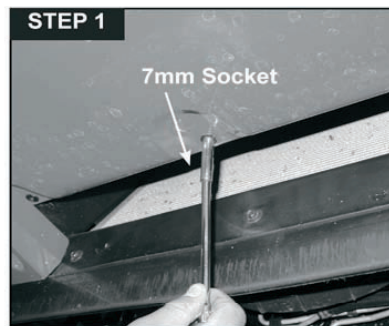



STEP 2.

Remove the 8 clip fasteners on the rear of the spoiler using a small screwdriver-style forked tool. There are 4 clips on each side.

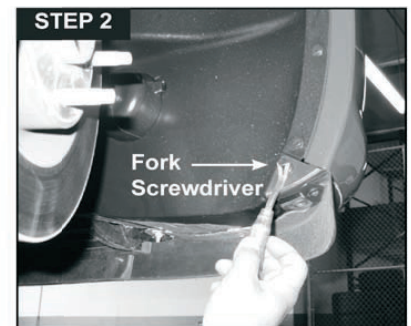



STEP 3.

Remove the 3 fasteners that hold the left and right spoiler to the bumper. Remove the left and right spoiler and the inner fender pieces.

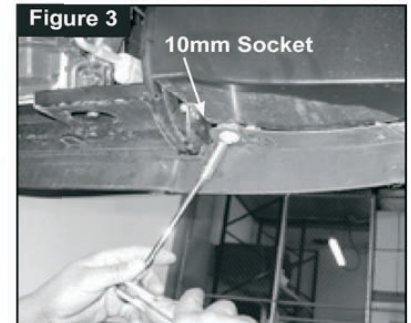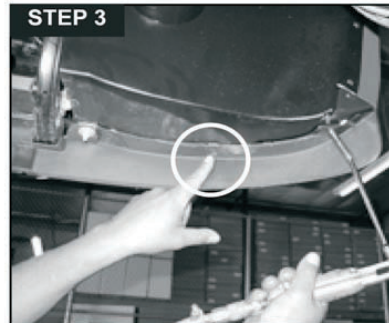

STEP 4.

Remove 8 plastic fasteners holding the center spoiler in place and remove the spoiler.

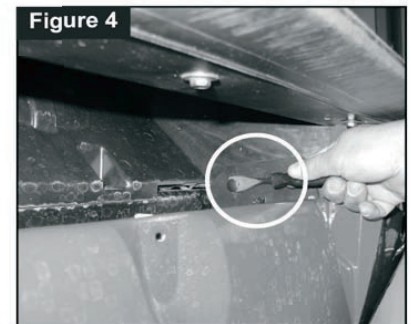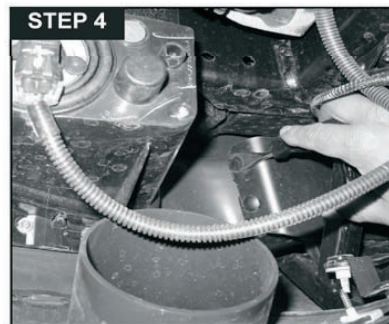

MAMotorworks



Midamotorworks



blog.autotainment.com

17082 N. US Hwy 45, P.O. Box 1368, Effingham, IL 62401
800.500.1500 • Worldwide: 217.540.4200 • FAX: 217.540.4800
www.mamotorworks.com • mail@mamotorworks.com

©Mid America Motorworks, Inc. All rights reserved.




C6 Chrome Replacement Front Grille (continued)

638-713


STEP 5.

Using a 7mm socket, remove 4 screws at the bottom of the grill that attach it to the radiator baffle.

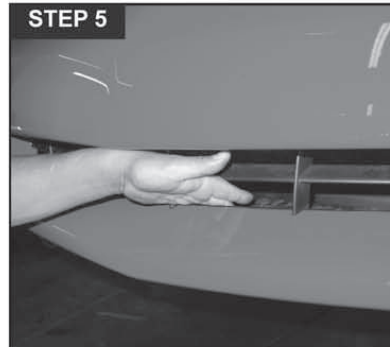



STEP 6.

Using a 7mm socket, remove the 5 remaining screws from the grill. Remove the grill.

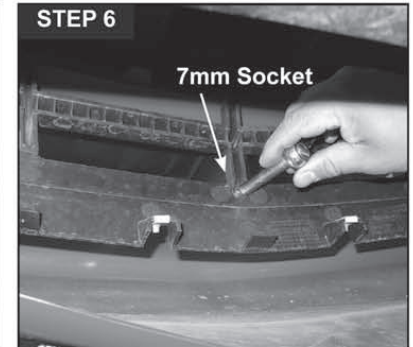



STEP 7.

Remove the 4 body clips from the stock grill and attach to the new grill.

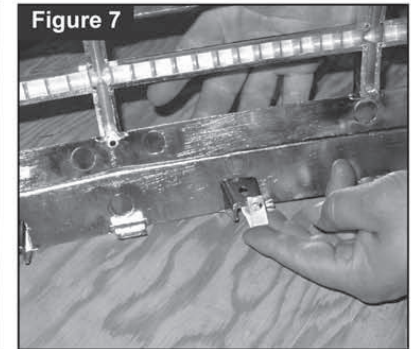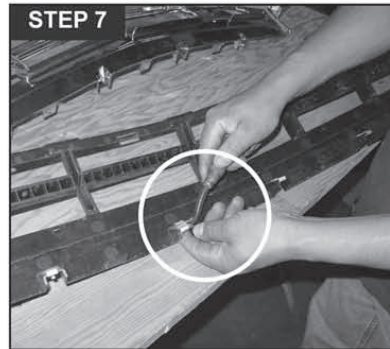

STEP 8.

Pull on the bottom of the bumper cover slightly to allow the placement of the new grille.

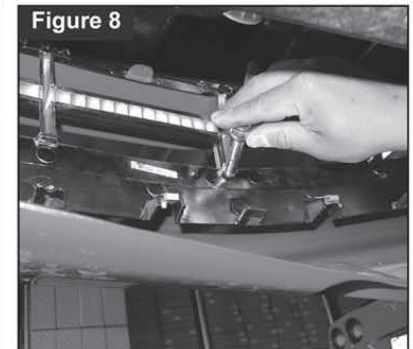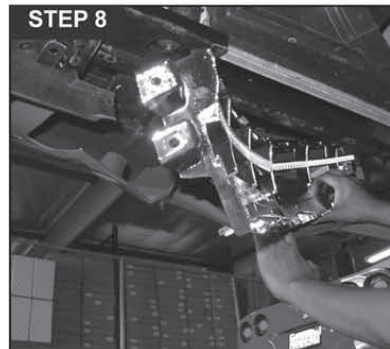

STEP 9.

Reverse steps 6-1, reassembling all components using the original fasteners.

