



Application: All years

Part Includes

1 - Cable (77.5")

2 - Keys

Car Cover Lock & Cable Set



Tools Needed



Search: **Car Covers**
www.mamotorworks.com

STEP 1.

Insert end of plastic-coated steel cable through grommet until it is visible at the bottom of car cover.

STEP 2.


Thread opposite end of cable through opening of other end to form a loop.

STEP 3.

Pass remaining end under automobile and insert cable end through remaining steel grommet.

STEP 4.

Lock end of cable to the cable itself to secure.

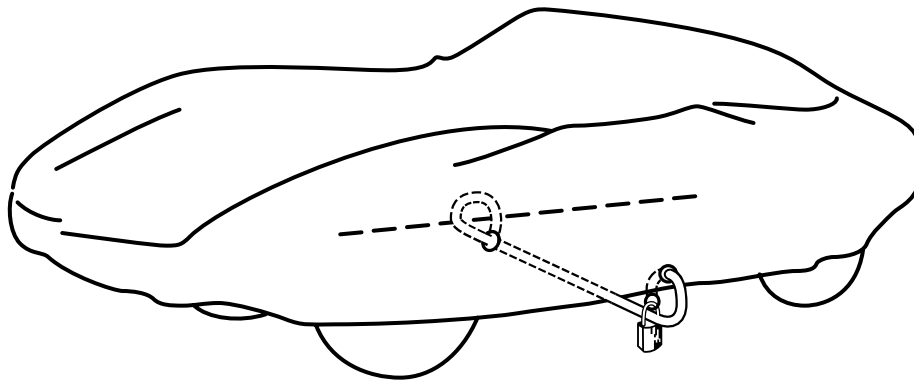

Mamotorworks



@CorvettePassion



MidAmericaMotorworks



CorvettePassion

2900 North Third Street, Effingham, IL 62401
800.500.1500 • Worldwide: 217.540.4200 • FAX: 217.540.4800
www.mamotorworks.com • generalmail@mamotorworks.com

©Mid America Motorworks, Inc. All rights reserved.