



Application: 1965-1977 Beetle, 1971-1975 Super Beetle


Ventshade Rain Deflector Installation Instructions

Part Includes

- 2 - Ventshades
- 6 - screws



Tools Needed

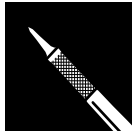

STEP 1. Rain deflectors are stamped to show position, LF for left front, RF for right front. Etc.


STEP 2. Insert shade end – flange between W/strip and outer door, or quarter panel. (See Sketch). **NOTE:** For proper installation, flange should completely disappear and shade curves fit flush up to window frame. Wherever flange does not go flush up, insert putty knife at that point and slightly loosen W/strip.

STEP 3. If W/strip bead overlaps the vent wing division post, clip off overlapping portion.

STEP 4. With the rain deflector in position, center punch and drill 7/164-inch diameter hole through hole in shade nearest division post and install one of the screws furnished.

STEP 5. Holding shade in position, center punch and drill remaining holes and insert screws. **NOTE:** Holes should be drilled at 90 degrees to surface of metal. Drilled holes should be touched up with paint to prevent rusting, and caulking compound placed on screws to seal holes.

NOTE: Wipe Rain Deflector after installation with clean cloth using metal cleaner or polish.

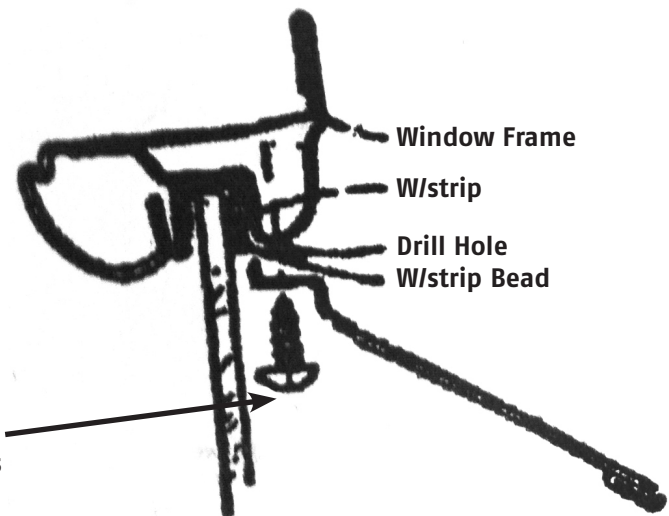

Insert Screw by
above instructions



2900 North Third Street, Effingham, IL 62401
800.500.1500 • Worldwide: 217.540.4200 • FAX: 217.540.4800
www.mamotorworks.com • generalmail@mamotorworks.com

©Mid America Motorworks, Inc. All rights reserved.