



Application: 1962-67 VW Beetle

Part Includes

1 - Circuit Board

RapidFire™ Stop Light System



Tools Needed



STEP 1. This retro fit kit is designed for VWs with a 12 volt negative ground battery and will not work with 6 volt systems.

STEP 2. Disconnect Battery. Do not skip this step. Also, do not try to "test" the LED array by connecting the leads directly to a battery charger. Permanent damage could occur to the LED array if you fail to heed these steps.

STEP 3. Remove the stoplight lenses from the car.

STEP 4. Remove the bulb holder from the taillight and disconnect the wire leads. Please note the function (stop, tail, turn, ground) of each wire before removal. Save the attaching screw!

STEP 5. Connect the wire leads from the LED unit to your car according to the chart below.

STEP 6. Insert the tab on the stainless steel plate into the slot in the taillight housing and attach with the screw removed earlier.

STEP 7. Remove the light divider from the taillight lens.

STEP 8. Reinstall the trim ring and taillight lens.

STEP 9. Reconnect the battery.

STEP 10. Test both STOP, turn, and taillight functions. Enjoy!


**Wiring: 12 volt,
negative ground only**

Green – Ground

Red – Stop with RapidFire

Black – Tail

Yellow – Turn Signal

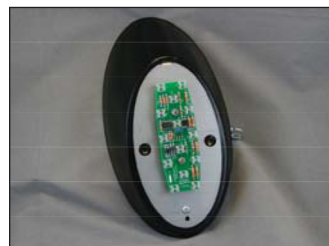

STEP 6



STEP 7



aircooledvws



@acvwpassion



MAMotorworksACVWPassion

2900 North Third Street, Effingham, IL 62401

800.500.1500 • Worldwide: 217.540.4200 • FAX: 217.540.4800

www.mamotorworks.com • generalmail@mamotorworks.com

©Mid America Motorworks, Inc. All rights reserved.