



**Application:** 1968-1982 Corvette

**Part Includes**

1 - Glass T-Top

## Glass T-Top Package



**Tools Needed**



**NOTE.**

It is important to read all instructions prior to installation to insure your top fits perfectly

**STEP 1.**

Place roof panels upside down on a soft surface to prevent scratching the glass.

- A. Remove the plastic cover that surrounds the latch itself (3 screws). Loosen (do not remove) the 3 nuts that hold down the latch.
- B. Open the latch so that the rod recedes the T-Top. **Note: The end of this rod will screw in and out as require to adjust rod length.**
- C. Remove plastic covers that surround the bayonet (1 screw). Bayonets are the parts that extend into the T-Bar. Hidden under the cover is 1 bayonet and 3 shims. Loosen (do not remove) the 2 nuts so that bayonet and shims are still attached loosely.

**STEP 2.**

With T-Top panels on the car, close latches on both tops.

- A. Move the tops side to side until you achieve a parallel position, down the center of the T-Tops and across the back next to the car or rollcages.
- B. With T-Tops parallel, tighten the nuts that hold the latch down.

**STEP 3.**

Go inside the car and tighten the bayonet nets. Note: adding shims raises tops and deleting shims lowers tops.

- A. If T-Tops appear unlevel return to the inside of the car and add or delete shims as necessary.
- B. Loosen the latch mechanism and adjust using the slot on the fastener if necessary to compensate for alignment.
- C. When level, tighten all bayonet nuts. Remove T-Tops and replace them a few times to make sure T-Tops can be replaced without force.



Mamotorworks



@CorvettePassion



MidAmericaMotorworks

**2900 North Third Street, Effingham, IL 62401**

**800.500.1500 • Worldwide: 217.540.4200 • FAX: 217.540.4800**

**www.mamotorworks.com • generalmail@mamotorworks.com**

©Mid America Motorworks, Inc. All rights reserved.



## Glass T-Top Package (cont.)


### STEP 4.

Replace all plastic covers to the T-Top panels and return panels to car.

### NOTE


The glass roof panels are designed to fit approximately 1/8" higher than the rear roof surface, therefore, do not attempt to adjust the glass panels flush with the roof surface.

VIEW A

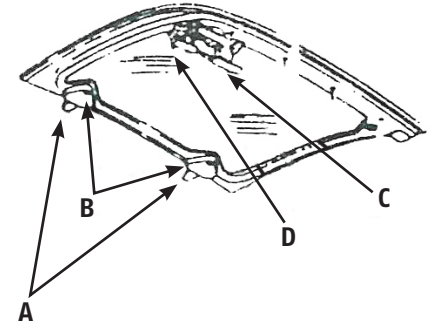

- A - Tongue
- B - Tongue Cover
- C - Latch
- D - Front Locating Pin

VIEW B

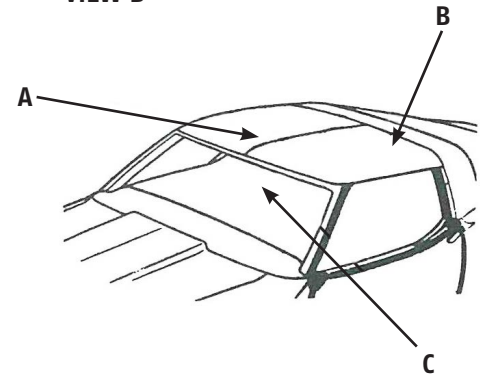

- A - T-Bar
- B - Rear Clearance
- C - Front Clearance