



Application: 1963-1967 Corvette

Part Includes

2 - Plugs

Replacement Deck Lid Plugs



Tools Needed



Search: **Convertible**
www.mamotorworks.com


PROCEDURE:

STEP 1.

Spread feet of Plug for proper fit.

STEP 2.

Sealer or putty placed between plug and bezel will help prevent leaks.

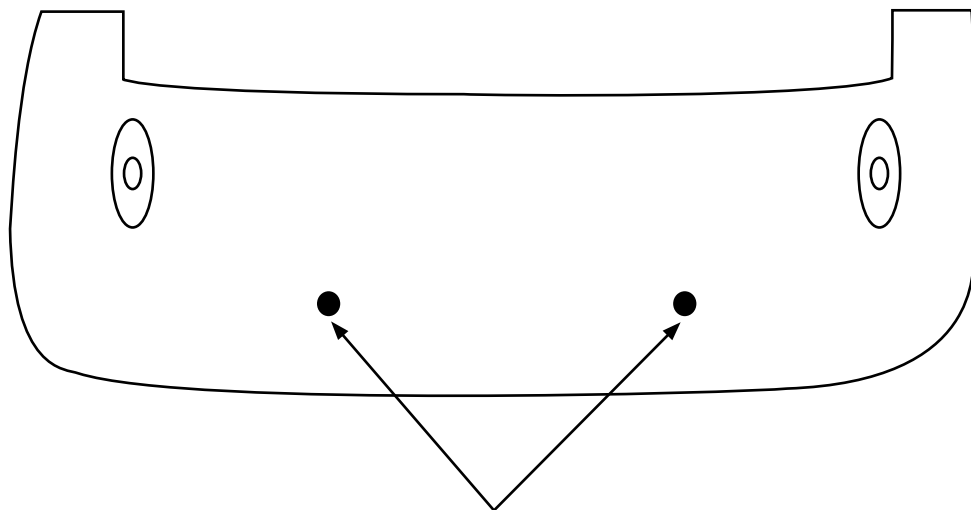

Plugs go here on convertibles with hardtop option.



Mamotorworks



@CorvettePassion



MidAmericaMotorworks



CorvettePassion

2900 North Third Street, Effingham, IL 62401

800.500.1500 • Worldwide: 217.540.4200 • FAX: 217.540.4800

www.mamotorworks.com • generalmail@mamotorworks.com

©Mid America Motorworks, Inc. All rights reserved.