



Application: 1984 - 1996 Corvette

Part Includes

1 - Roof Panel Kit (4 pads)

Anti Squeak Roof Panel Kit



Tools Needed



Search: **Convertible**
www.mamotorworks.com

STEP 1.

Remove the roof panel and place it on a smooth surface covered by a soft cloth, with top side of panel facing down.

STEP 2.


Clean corner areas where pads are to be placed.

STEP 3.

Remove the pad's backing and install on roof panel as shown in diagram.

1. Panel, Removable Roof
2. Seal, Roof Panel Rear
3. Seal, Roof Panel Front

VIEW A

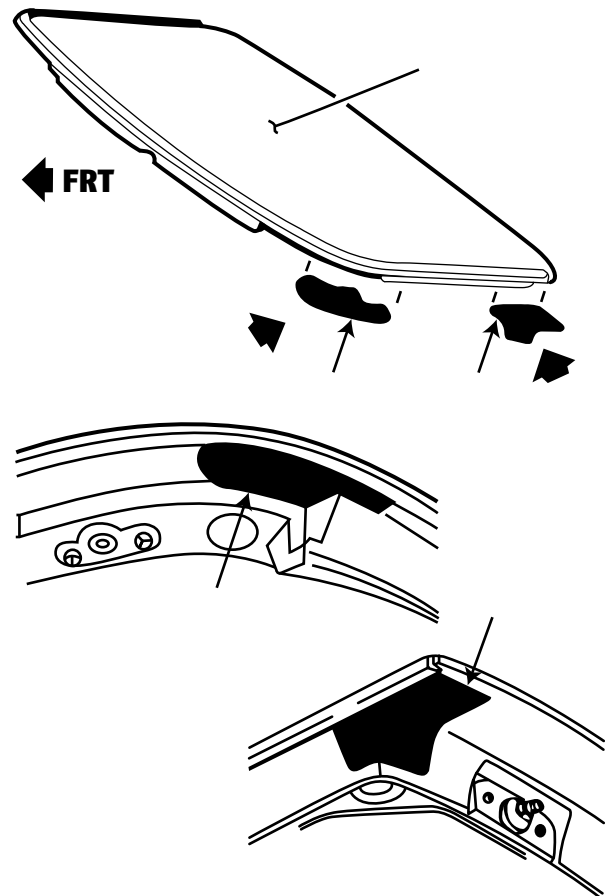

Mamotorworks



@CorvettePassion



MidAmericaMotorworks



CorvettePassion

2900 North Third Street, Effingham, IL 62401
 800.500.1500 • Worldwide: 217.540.4200 • FAX: 217.540.4800
www.mamotorworks.com • generalmail@mamotorworks.com
 ©Mid America Motorworks, Inc. All rights reserved.