



**Application:** 1968-1982

## Door Spring Replacement



### Tools Needed

READ ALL INSTRUCTIONS BEFORE BEGINNING INSTALLATION.

**STEP 1.**

Hold spring with short loop toward top.

**STEP 2.**

Drop the free end of the spring through the hole in the top of the hinge.

**STEP 3.**


Pull rearward on the bottom of the spring with the installation tool until spring snaps into the slot in the bottom edge of the hinge.

**STEP 4.**

Put tension on installation tool (away from rollers) and drive spring upward.

**STEP 5.**

Lubricate all moving parts.

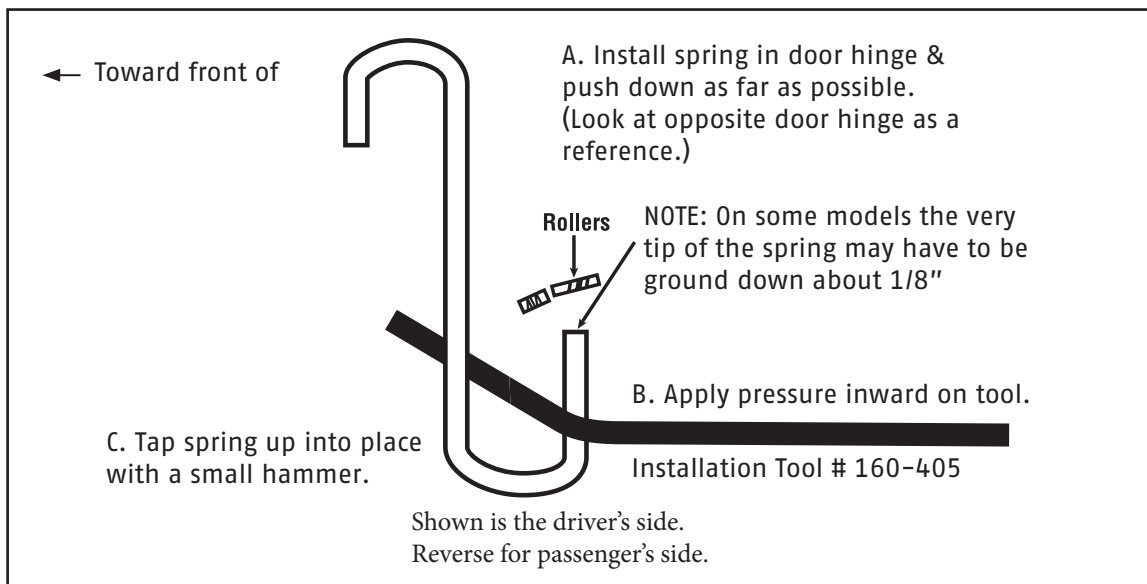

Mamotorworks



@CorvettePassion



MidAmericaMotorworks

2900 North Third Street, Effingham, IL 62401

800.500.1500 • Worldwide: 217.540.4200 • FAX: 217.540.4800

www.mamotorworks.com • generalmail@mamotorworks.com

©Mid America Motorworks, Inc. All rights reserved.