INSTRUCTION SHEET

Part Number

604-487

1 - Sunvisor Pivot Elbow

Part Includes



Application: 1979–1981 Corvette

Sunvisor Pivot End - LH



Tools Needed





Page 1

REMOVAL INSTRUCTIONS:

Mask off the area around (Item A) plug using masking tape to prevent scratching roof mount (Item H).

STEP 2.

Carefully remove chrome plug (Item A), using small screwdriver or pick.

Pry retainer (Item B) off of existing pivot end, allowing spring (Item C) to be easily removed. NOTE: As the teeth are easily broken off of the retainer during removal, replacement of this retainer and tension spring is recommended, see Mid America's #602-307, Retainer and Tension Spring Kit.

Existing pivot end (Item D) should now slide out. If pivot end is rusted or broken, use a punch to remove.

Remove wire clip (Item E) from existing pivot allowing you to slide existing extension rod (Item G) and bushings (Item F) out of pivot end.

INSTALLATION INSTRUCTIONS:


With rod (Item G) extended outward from sunvisor, assemble bushings (Item F) around rod.

NOTE: If factory bushings were removed (and most likely destroyed during removal), replacement of bushings (Item F) is necessary, see Mid America's #602-305, 1979-82 Sunvisor End Bushings. New bushings will provide the tension necessary to hold your sunvisor in the position you desire.

Remove wire clip (Item E) from new pivot end. Reinstall rod (Item G) with bushings (Item F) into new pivot end until slots align, allowing reinstallation of wire clip.

STEP 3.

Install completed sunvisor assembly into roof mount (Item H). Insert tension spring and attach retainer to new pivot end shaft. Check movement of sunvisor. Reinstall chrome plug.

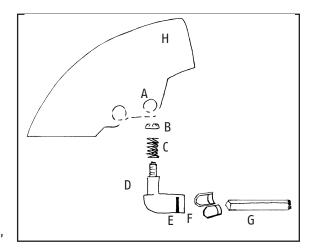





Mamotorworks



@CorvettePassion



MidAmericaMotorworks



CorvettePassion

2900 North Third Street, Effingham, IL 62401 800.500.1500 · Worldwide: 217.540.4200 · FAX: 217.540.4800 www.mamotorworks.com · generalmail@mamotorworks.com @Mid America Motorworks, Inc. All rights reserved.