



**Application:** 1968-1982



Search: **Hood Release**  
[www.mamotorworks.com](http://www.mamotorworks.com)

**Part Includes**

- 1 - short lanyard
- 1-long lanyard

# Emergency Hood Release Lanyard



**Tools Needed**

**DIRECTIONS FOR SAFE AND PROPER APPLICATION**

**STEP 1.**

Raise hood of Corvette, remove the Emergency Lanyards from the packaging. You will have one short cable and one long assembly. (Fig. 1)

**STEP 2.**


Starting on the passenger side, (right side) remove the small cotter pin retaining the stock release cable. Install the short cable end fastener on the stock pin; reinstall the stock washer and cotter pin. (Fig. 2 and Fig. 3)

**STEP 3.**

Moving to the left side of the car, fish open cable end down from the firewall area following the path of the stock hood release cable. You might want to facilitate your install by using a pointed drift to help move the stock cable aside. Again, remove the drivers side cotter pin and small washer that retains the stock release cable, install cable end fastener on the pin and reinstall the pin, small washer and cotter pin.

**STEP 4.**

Moving to the interior under the drivers side dash cluster, find the raw cable end, slipping the cable stay collar over the cable, make a large hand hold loop, crimp the supplied collar to secure the cable ends together. Make sure this is a tight crimp. (Fig. 4) Stow this large hand hold under your dash, we recommend you wire tie this to the under dash area.

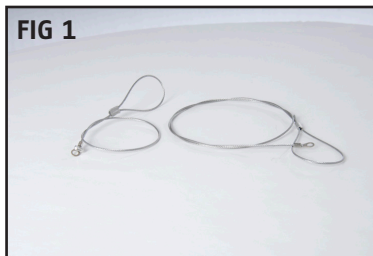

Mamotorworks



@CorvettePassion



MidAmericaMotorworks



CorvettePassion

2900 North Third Street, Effingham, IL 62401  
 800.500.1500 • Worldwide: 217.540.4200 • FAX: 217.540.4800  
[www.mamotorworks.com](http://www.mamotorworks.com) • [generalmail@mamotorworks.com](mailto:generalmail@mamotorworks.com)  
 ©Mid America Motorworks, Inc. All rights reserved.