



Application: 1984-1986

Part Includes

1 - Amp Relay

Bose Amp Relay



Tools Needed



Search: *Engine*

www.mamotorworks.com

STEP 1.

To access the 1984-89 Bose amp relay, remove the right lower dash panel. It is the panel with the courtesy light in it.

The Bose amp relay is attached to the dash brace that also holds the directional flasher. (Shown in graphic.)

STEP 2.

The Bose amp relay is located directly above the directional flasher. Do not try to remove the relay at this point.

Instead, lift up on the connector lock tab and pull the connector wire lead down. Then remove the relay.

STEP 3.

Plug in the new relay and tie the relay and connector to the nearby harness wire on the dash brace. This prevents a future rattle.

STEP 4.

Reassemble the lower panel by placing the left center edge on top of the heater outlet and push forward. Be careful not to

kink any AC vacuum lines in this area.


STEP 5.

Plug in the courtesy light and reinstall the three screws.

STEP 6.

See component diagrams for 1990-91 and 1992-96 applications.

1992-96 Location

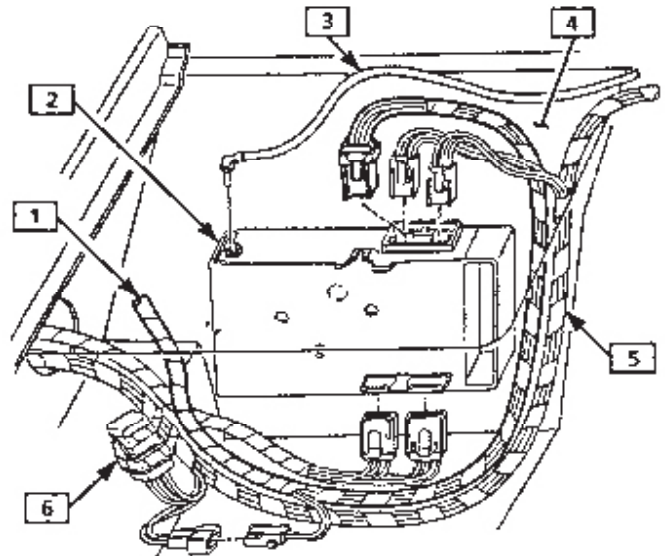

- 1** FRONT BODY HARNESS
- 2** RADIO RECEIVER
- 3** ANTENNA EXTENSION CABLE
- 4** RIGHT REAR STORAGE COMPARTMENT
- 5** SPEAKER HARNESS
- 6** AMPLIFIER RELAY



Mamotorworks



@CorvettePassion



MidAmericaMotorworks



CorvettePassion

2900 North Third Street, Effingham, IL 62401

800.500.1500 • Worldwide: 217.540.4200 • FAX: 217.540.4800

www.mamotorworks.com • generalmail@mamotorworks.com

©Mid America Motorworks, Inc. All rights reserved.



Description (cont.)

