



Application: 1968-1982

Part Includes

1 - Hood Release Handle and Cable

1- Cable Stop

Hood Release Cable & Handles



Tools Needed



Search: **Hood**

www.mamotorworks.com

STEP 1.

Slide new handle and cable assembly into existing bracket. This may take several attempts, as the tubing inside the bracket is very small. Spinning the cable helps.

STEP 2.


Push cable through the bracket so the handle is flush with the bracket. We recommend temporarily taping the handle in place to prevent it from sliding back out while you are fastening the other end under the hood.

STEP 3.

Working under the hood: Install enclosed cable stop onto the end of the cable. The cable stop is what triggers the hood latch to open, so position the stop approximately 1/2" away from the latch.

STEP 4.

Slightly bend cable end, behind cable stop (see diagram). This is to secure the cable and allow hood opening, should the cable stop fail in the future.

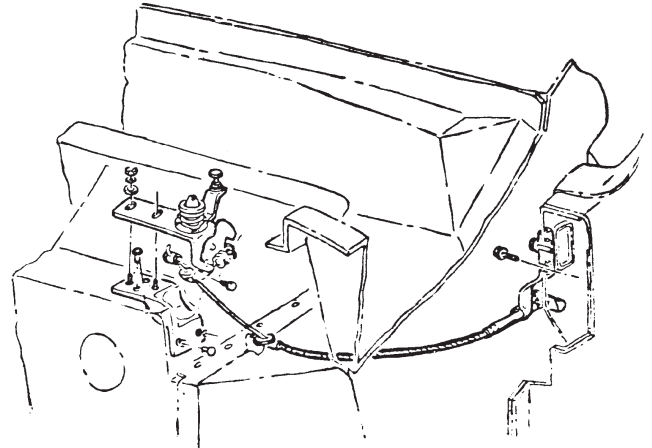

Mamotorworks



@CorvettePassion



MidAmericaMotorworks



CorvettePassion

2900 North Third Street, Effingham, IL 62401

800.500.1500 • Worldwide: 217.540.4200 • FAX: 217.540.4800

www.mamotorworks.com • generalmail@mamotorworks.com

©Mid America Motorworks, Inc. All rights reserved.