



Application: 1968-1979 C3 Corvette



Search: **Mirror**
www.mamotorworks.com

RH Mirror



Tools Needed



Part Includes

- 1 - Rh mirror
- 1- Mounting Bracket

STEP 1.

Cut out and assemble template (on page 2). Tape the template to door as shown (see diagram, Item #1).

STEP 2.

Mark Centerpoints and remove template.

STEP 3.



First, drill 1/8" pilot holes for ell nut holes, then drill out to 3/8" allowing a snug fit for well nuts.

STEP 4.

To center new gasket, a "loose" installation of the mounting bracket and mirror is required to ease installation, preassemble mounting bracket with screws and well nuts. Place the new gasket on the door and insert the mounting bracket assembly over the gasket and into the door. Fit the mirror onto the mounting bracket and center the gasket around the mirror.

STEP 5.

Carefully hold the gasket in place, remove the mirror and tighten screws into the mounting bracket. Mount the mirror onto the bracket using new allenhead screw.

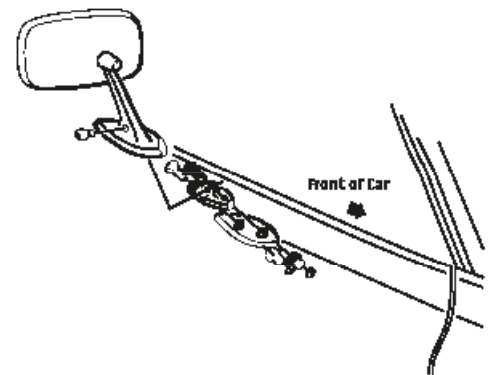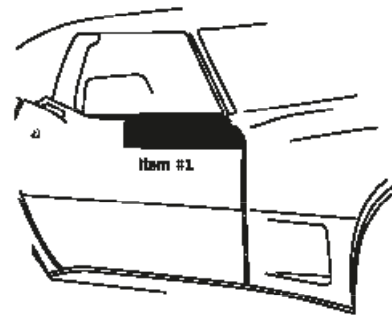

Mamotorworks



@CorvettePassion



MidAmericaMotorworks



CorvettePassion

2900 North Third Street, Effingham, IL 62401
800.500.1500 • Worldwide: 217.540.4200 • FAX: 217.540.4800
www.mamotorworks.com • generalmail@mamotorworks.com

©Mid America Motorworks, Inc. All rights reserved.




Description (cont.)

Installation Template for #604-474 & #604-475, 1968-79 RH Mirror

Form #604-75-0707-02 Copyright 2007 Mid America Motorworks

Instructions: Trim out template and affix tape to join edge A to edge B

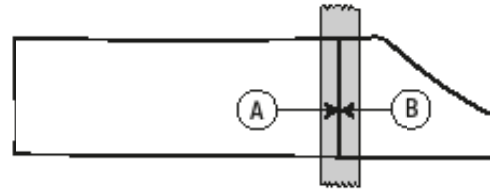

IMPORTANT!
Due to variance in copier/printers duplication, please measure and verify the 1 3/4" dimension between mount hole centers on this template before drilling.

This Box Should Be 1" x 1"

Align with

Edge B.

1 3/4"

Center punch and drill 3/8 dia. hole

Tape this edge (B) to edge A.

Measure the 1" x 1" box (in dotted lines) on each template piece to ensure your template is printed at the correct size. If incorrect, discard template and contact Mid America Motorworks.

Align with front edge of door

This Box Should Be 1" x 1"

top of door

Edge A.

Tape this edge (A) to edge B.