



Application: 1984-1996 C4 Corvette

Part Includes

1 - Short lanyard

1- long lanyard

Emergency Hood Release Lanyard



Tools Needed



Search: **Hood**

www.mamotorworks.com

STEP 1.

Open clam shell hood, remove Hood Release Lanyards from packaging.

STEP 2.


Place guide block over the driver's side hood latch mechanism where the stock hood release cable mounts. Secure guide block to stock cable housing with supplied wire tie.

STEP 3.

Trim excess wire tie, loop cable end over the stock cable end fitting as shown. Feed large looped end under the hood area and tuck under windshield lower edge for later use.

STEP 4.

Repeat procedure on passenger side latch.

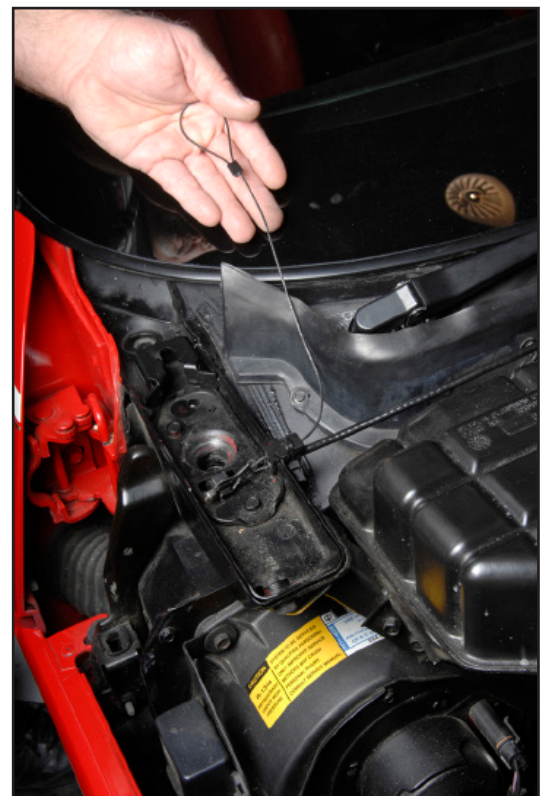

Mamotorworks



@CorvettePassion



MidAmericaMotorworks



CorvettePassion

2900 North Third Street, Effingham, IL 62401

800.500.1500 • Worldwide: 217.540.4200 • FAX: 217.540.4800

www.mamotorworks.com • generalmail@mamotorworks.com

©Mid America Motorworks, Inc. All rights reserved.