




Application: 1963-1966

Part Includes

Turnsignal Light Extension



Tools Needed

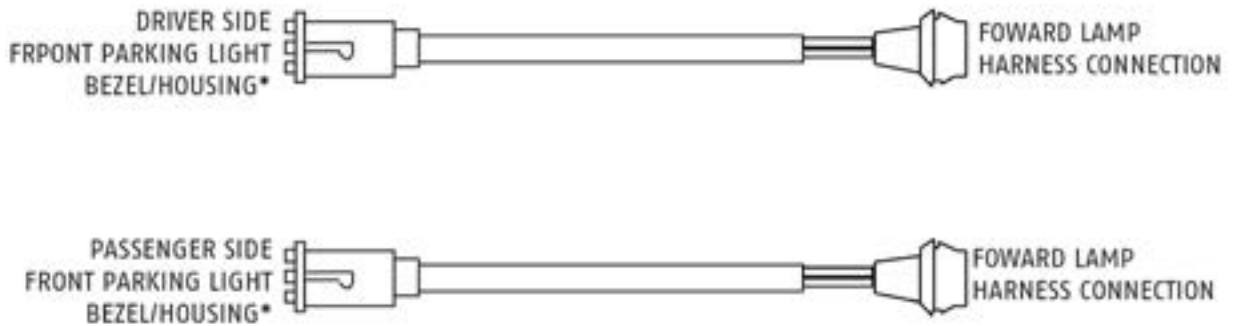

*** THE ORIGINAL FRONT PARKING/TURN SIGNAL LIGHT ASSEMBLY WAS COMPRISED OF A BEZEL/HOUSING WITH A NON-REMOVABLE LIGHT SOCKET AND WIRING***

STEP 1.

To install this repair set, customer must decide best method to separate the old light socket from its bezel/ housing.

STEP 2.

After Removing the old socket, insert the new socket into the opening of the bezel/ housing. The "fingers" on the lamp socket will temporarily hold it in place for the next step.

STEP 3.

After the new light socket had been affixed to bezel/housing, we recommend the use of a permanent epoxy (or similar product) applied onto both the socket and bezel/housing. You ultimately want to make sure that the socket will not detach from the bezel/ housing, and that the connection is water tight. If you do not perform this step, the socket will probably separate from the bezel!



Mamotorworks



@CorvettePassion



MidAmericaMotorworks

2900 North Third Street, Effingham, IL 62401

800.500.1500 • Worldwide: 217.540.4200 • FAX: 217.540.4800

www.mamotorworks.com • generalmail@mamotorworks.com

©Mid America Motorworks, Inc. All rights reserved.