



Application: 2005-2013

Part Includes

- 2 - Splash Guards
- 6 - Mounting Screws

Custom-Fit Splash Guards



Tools Needed



Search: **Guards**
www.mamotorworks.com


STEP 1. (FRONT GUARDS)

Install mounting tabs on each guard using (2) 3/8" phillips machine screws and (2) kep nuts. Bend tab so it will lie flat on lower fender surface.

STEP 2. (FRONT GUARDS)

Hold Guard up to fender in position. Note: masking tape should be applied for making holes to drill. Apply tape to fender well. Holding guard in a perfect level position, mark through holes in guard onto tape. A helper can assist in aligning per diagram A.

DIAGRAM A

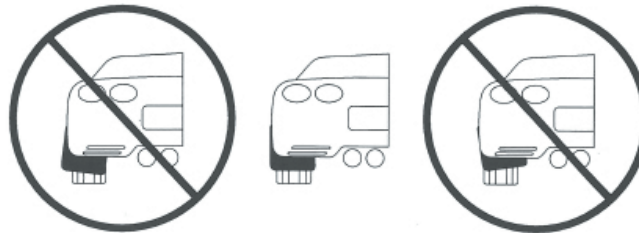

STEP 3. (FRONT GUARDS)

Drill with a 9/64" bit (3) locations, 3 in fender well and 1 for lower bracket that lies flat against lower body. Remove masking tape. Install supplied (4) mounting screws. Make sure the guard edge fits flush with painted surface so not to rub paint.

STEP 1. (REAR GUARDS)

NOTE: No mounting tabs are used on rear guards. Remove rear wheel. Repeat step 2 using tape and marking holes for drilling. Drill with a 9/64" bit (3) locations. The large 12x1 screws will be installed in lower splash guard hole. This lower hole location is fastening into the black inner wheel well liner.

INSTALLATION IS SIMPLE, HOWEVER, FOR BEST RESULTS HAVE A HELPER ASSIST IN ALIGNING GUARDS AND DRILLING HOLES.



Mamotorworks



@CorvettePassion



MidAmericaMotorworks



CorvettePassion

2900 North Third Street, Effingham, IL 62401
 800.500.1500 • Worldwide: 217.540.4200 • FAX: 217.540.4800
www.mamotorworks.com • generalmail@mamotorworks.com
 ©Mid America Motorworks, Inc. All rights reserved.