



Application: 1985 late-1988



Search: **Shift Boots**
www.mamotorworks.com

Part Includes

1 - Manual Shifter Boot

Shifter Boot



Tools Needed



Note: The grommet in the top of the shifter boot (Fig. 1) is no longer available from General Motors or any aftermarket source. You must reuse your old grommet with your new shifter boot.

STEP 1.

Remove the old shifter boot from your C4. (Fig. 2) Note the position of the grommet in the old boot so you can install it correctly in your new shifter boot.

STEP 2.

Take the new shifter boot and turn it inside out. Insert the grommet so that the top of the grommet is at the top of the shifter boot when the shifter boot is turn right side out. To install the grommet slide it onto the shank of a screwdriver and use the handle to keep it positioned correctly while pushing it into the new shifter boot. (Fig. 3) Do not tear or damage the boot. If the grommet does not go in easily, use the heat gun to warm and soften the leather so it will expand slightly and the grommet can be inserted.

STEP 3.

Re-install new shifter boot onto shifter surround plate and install in reverse order as removed.


1



2



3

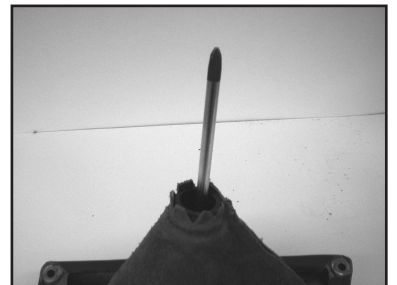

Mamotorworks



@CorvettePassion



MidAmericaMotorworks



CorvettePassion

2900 North Third Street, Effingham, IL 62401
800.500.1500 • Worldwide: 217.540.4200 • FAX: 217.540.4800
www.mamotorworks.com • generalmail@mamotorworks.com
©Mid America Motorworks, Inc. All rights reserved.