



Application: C6 2005-2013



Search: *Ignition Switch*
www.mamotorworks.com

Part Includes

1 - Push Button Ignition Switch

Ignition Switch



Tools Needed

STEP 1.

Using trim tool remove gauge cluster surround. Note, surround doesn't need to be entirely removed but just enough to gain access to the back side of the Ignition Switch (Fig 1 and 2)

STEP 2.

Unplug electrical connection on back of switch (Fig 3, A). Release tabs on switch and remove (Fig 3, B)

STEP 3.

Reverse previous steps for reinstallation.



Figure 1.



Figure 2.

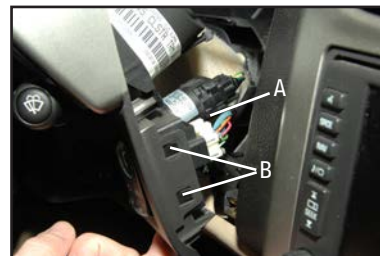


Figure 3.



Mamotorworks



@CorvettePassion



MidAmericaMotorworks



CorvettePassion

2900 North Third Street, Effingham, IL 62401
800.500.1500 • Worldwide: 217.540.4200 • FAX: 217.540.4800
www.mamotorworks.com • generalmail@mamotorworks.com
©Mid America Motorworks, Inc. All rights reserved.