



Application: 2005-2007

Part Includes

1 - Coupler (red or black)

High Flow Power Coupler



Tools Needed



STEP 1.

Unplug breather

STEP 2.

Loosen clamps (using screwdriver) and remove stock coupler

STEP 3.

Reposition the new coupler in the same location as the old one (so the breather hole is in the correct alignment) **USE WD40 OR OTHER LUBRICANT IF NECESSARY.**

STEP 4.



Reinstall clamps and tighten.

STEP 5.

Plug-in breather.

STEP 6.

Next step is to enjoy your new High Flow Coupler.

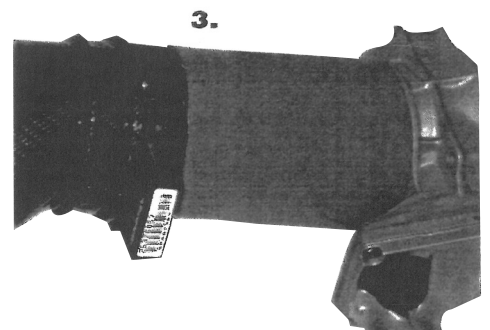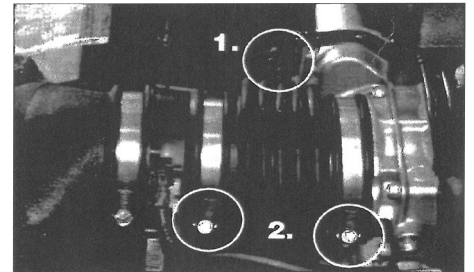

Mamotorworks



@CorvettePassion



MidAmericaMotorworks

2900 North Third Street, Effingham, IL 62401

800.500.1500 • Worldwide: 217.540.4200 • FAX: 217.540.4800

www.mamotorworks.com • generalmail@mamotorworks.com

©Mid America Motorworks, Inc. All rights reserved.