



Application: 2005–2013 C6 Corvette

638-131


Grand Sport Style Fender Accent Stripes

Part Includes

1 – Set for RH and LH fenders



Tools Needed

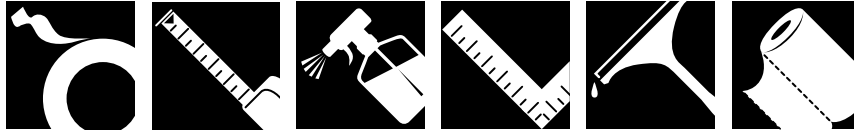

Before you begin, thoroughly clean your fender. Remove all dirt, grime and buildup for best results. It is recommended to have a good hard wax coat before installation. It is recommended that the stripes NOT be installed in direct sunlight.

NOTE: It may take up to 2 hours for the stripes to completely dry after you have positioned them. Do not drive your Corvette until the stripes are completely dry. Do not leave your Corvette in the sun while the stripes dry, as it will cause more bubbles.

NOTE: For emergency removal, use a heating device or a good hair dryer to take the stripes off your fender.

NOTE: The base model Corvette has different installation points from the Grand Sport and Z06 models.

STEP 1.

For a dry run, trim the excess release paper from the upper and lower edges of the decal. The smaller decal positions toward the front of the fender. On the Grand Sport, Z06, and ZR1 models, the tip of this stripe starts approximately 1 3/4" to the rear of the headlight lens. The bottom of the stripe sits approximately 1/8" above the fender swell. On the base model, the tip of this forward stripe begins 1 3/4" to the rear of the headlight lens, and the bottom edge of the stripe sits directly on the fender swell. The rear stripe fits approximately 3/4" behind the front stripe. When satisfied with the position of the stripe, you may mark the position with masking tape.

STEP 2.

Use a spray bottle of glass cleaner, such as MWorks 100–111 to wet the fender. Gently peel the front decal from the release paper and spray glass cleaner on the adhesive side of the decal as well.

STEP 3.

Gently lay the front stripe on the fender and "float" it into the desired position. The glass cleaner gives you time to position the stripe where you want it. Lift and re-wet the fender if necessary to reposition.

STEP 4.

A damp sponge or soft towel is useful to gently squeegee the excess fluid from beneath the decal, and to eliminate bubbles beneath the vinyl. Start from the center of the decal and work toward the edges.

STEP 5.

Once the front stripe is in position, rewet the fender and lay the rear stripe in the same manner, approximately 3/4" to the rear of the forward stripe. Once the stripe is in the desired position, gently squeegee any bubbles and excess fluid from the decal and the fender.

REMINDER: Allow the stripes to completely dry out of direct sunlight for at least two hours before driving.



Mamotorworks



@CorvettePassion



MidAmericaMotorworks

2900 North Third Street, Effingham, IL 62401

800.500.1500 • Worldwide: 217.540.4200 • FAX: 217.540.4800

www.mamotorworks.com • generalmail@mamotorworks.com

©Mid America Motorworks, Inc. All rights reserved.