



Application: Corvette 1997-2004 C5


Part Includes

- 2 - LED Lighting Struips
- 18 - Tri-Chip Super Bright LEDs

C5 Footwell LEDs



Tools Needed

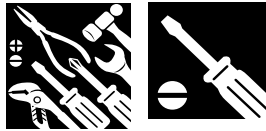

Search: **Lights**

www.mamotorworks.com

STEP 1.

Using a flat blade screwdriver, pry at the center of the factory light and remove it from the panel above the footwells.



STEP 2.

Locate the 2 retainers that hold the panel in place. Using a forked panel removal tool or equivalent, pry the retainers out and drop the panel down for access.



STEP 3.

Route the connector of the LEDs down from the top of the panel and through the hole where the light housing installs.



Mamotorworks



@CorvettePassion



MidAmericaMotorworks



CorvettePassion

2900 North Third Street, Effingham, IL 62401

800.500.1500 • Worldwide: 217.540.4200 • FAX: 217.540.4800

www.mamotorworks.com • generalmail@mamotorworks.com

©Mid America Motorworks, Inc. All rights reserved.



Description (cont.)

STEP 4.

Push the connector into the socket where the bulb was aligning the red wire with the orange wire in the socket. Black aligns with black. Make sure lights are now lit. Make sure lights haven't "timed out". Fold wires back and re-install light housing.



STEP 5.

Re-install panel and retainers. Plan where you intend to locate the strips. Wipe area with alcohol so the strips stick well. Peel backing off LED strip and attach strips to the panel. This picture shows the drivers side. Passenger side is similar. If you have any problems getting LEDs to light, remove connector and spread copper wires on connector out to make proper contact with connector.

