



Application: 2005-2013 Corvettes


These Instructions Are Applicable To:

642-600, 642-601, 642-602

C6 Nose/Rear Emblem Inlay Decal



Tools Needed

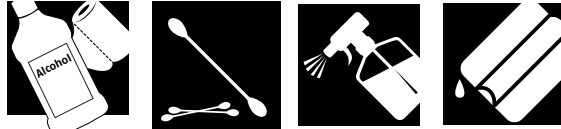

Search: **Emblem**
www.mamotorworks.com

STEP 1.

Clean the front waterfall emblem thoroughly with rubbing alcohol and a q-tip.

STEP 2.

Once the alcohol has evaporated, spray soapy water on the car emblem as well as the decal to begin application.

STEP 3.

Maneuver the decal into place then firmly press the soapy water out from behind the decal with a squeegee; let stand.

STEP 4.

Repeat steps on the rear emblem.

NOTE: THE DECAL REQUIRES 24 HOURS TO PROPERLY ADHERE TO THE EMBLEMS. PLEASE ALLOW THIS TIME BEFORE DRIVING.

Step 1



Step 2



Step 4



Step 3



Mamotorworks



@CorvettePassion



MidAmericaMotorworks



CorvettePassion

2900 North Third Street, Effingham, IL 62401
800.500.1500 • Worldwide: 217.540.4200 • FAX: 217.540.4800
www.mamotorworks.com • generalmail@mamotorworks.com
©Mid America Motorworks, Inc. All rights reserved.