



Suggested Installation Instructions for:

642-826, 627-850, 627-851

1970-1977 C3 Coupe T-Top Weatherstrip


Count on Mid America Motorworks for all your Corvette Parts and Corvette Accessories

Please take the time to read and understand these installation instructions.

1. Prepare a working surface with a soft towel, cloth, or blanket to protect your top's exterior surface from scratches.
2. Start the removal of the old seal by rolling it back - spraying a release agent will aid in softening the old adhesive.
3. Use of a flathead screwdriver will aid in removing the old seal - especially around the nylon securing pins.
4. It's common for these nylon securing pins to tear off and stay on the top when removing the old seal - a pair of pliers will aid in removing any remaining pins once the seal has been removed.
5. Remove all remaining remnants of the old seal, pins, and adhesive and clean the area to prepare for the new seal - an adhesive remover works well for removing the old glue.
6. If using an adhesive remover, spray the area (wipe away any overspray immediately) or soak a cloth in the chemical to rub away the old glue after it has soaked for a few minutes.
7. Once the old seal, pins, and adhesive have been removed, now is the ideal time to deep clean the underside of your top and make sure it's as clean as possible before installing the new seal.
8. **NOTICE:** Be sure to test fit the seal with no adhesive first to ensure the correct fitment. Once adhesive has been applied, this product cannot be returned.
9. Once fitment has been confirmed, apply the adhesive to the seal using a zigzag pattern in the wider areas and straight lines in the narrower areas. Depending on the type of adhesive used, you may need to allow the adhesive to reach a tacky to the touch dryness before applying it to the top (refer to your preferred adhesives instructions).
10. Be sure to apply adhesive to both surfaces to be bonded - use the same zigzag/straight line pattern on the top itself where the seal rests avoiding the holes for the nylon securing pins.

QUESTIONS? Contact us directly at 800.500.1500 or customer.service@mamotorworks.com!



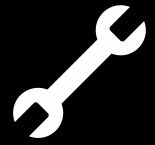

Suggested Installation Instructions for:

642-826, 627-850, 627-851

1970-1977 C3 Coupe T-Top Weatherstrip

Count on Mid America Motorworks for all your Corvette Parts and Corvette Accessories

Please take the time to read and understand these installation instructions.

11. Once both surfaces have been prepped with adhesive and the seal is ready to be installed, begin setting it into place - this step is easier with assistant that can hold the seal up to allow just the section you're bonding to the top at that time to touch.
12. As you lay the new seal in place, a flathead screwdriver will aid in tucking the seal into narrow areas and to help guide the nylon securing pins into their holes.
13. Once secured in place, allow the adhesive to fully cure before reinstalling the top on your Corvette.
14. If doing both tops, repeat this process for the other side.

QUESTIONS? Contact us directly at 800.500.1500 or customer.service@mamotorworks.com!

