



Application: 1980-1982 Corvette

Part Includes
1 - Module

Pulse Module, Windshield Wiper



Tools Needed



Search: *Electric Relays*
www.mamotorworks.com

STEP 1.

Disconnect battery.

STEP 2.

Locate your original intermittent wiper module (A). On 1908-82 Corvettes, it will be located behind the passenger side seat, at the front of the tire jack compartment, as shown below.

STEP 3.

Disconnect original module's wiring pigtails (B) from existng wiring harness (C).

STEP 4.


Remove the 2 existing screws (D) used to fasten original module to the support.

STEP 5.

Install new replacement module and connect to existing wiring harness, in reverse order.

STEP 6.

Re-connect battery.

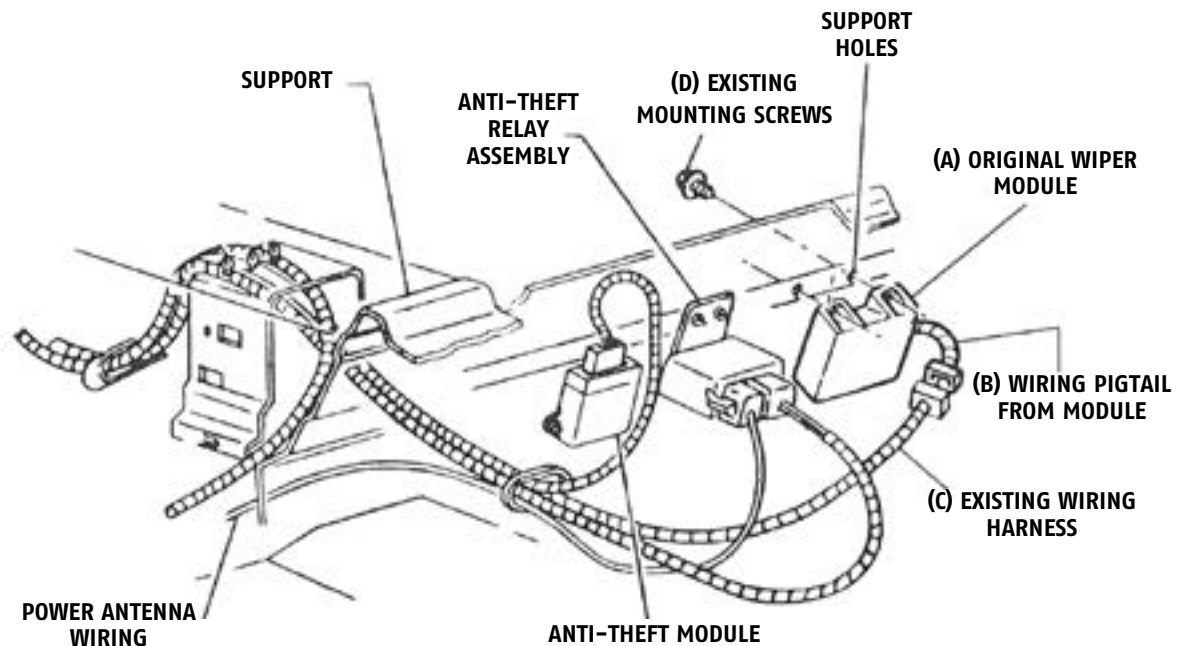

Mamotorworks



@CorvettePassion



MidAmericaMotorworks



CorvettePassion

2900 North Third Street, Effingham, IL 62401
800.500.1500 • Worldwide: 217.540.4200 • FAX: 217.540.4800
www.mamotorworks.com • generalmail@mamotorworks.com
©Mid America Motorworks, Inc. All rights reserved.