




Application: 1978-1982 Corvette



Search: Radiators, Cooling System
www.mamotorworks.com/Corvette

1978-1982 Heater Box Seal Rebuild Kit With Air Conditioning

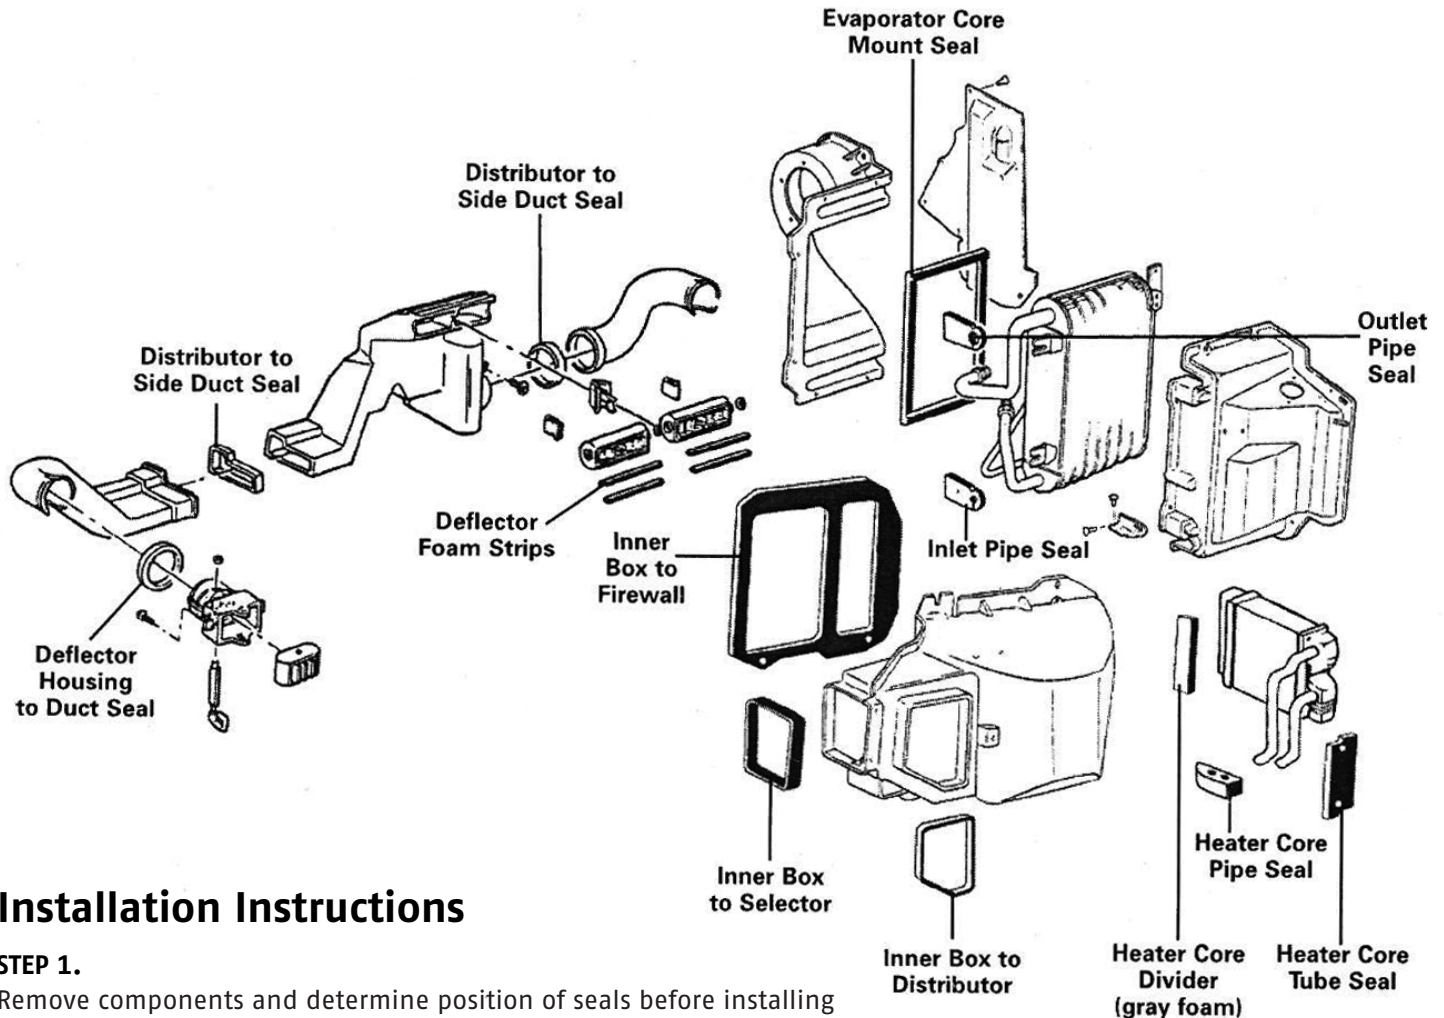

Installation Instructions

STEP 1.

Remove components and determine position of seals before installing

STEP 2.

Clean all surfaces before installing seals to heater/AC boxes and ductwork.
Use weatherstrip adhesive to install seals; before assembly allow adhesive to dry.

STEP 3.

Weatherstrip tape is used to attach outer boxes to firewall.



Mamotorworks



@CorvettePassion



MidAmericaMotorworks



CorvettePassion

2900 North Third Street, Effingham, IL 62401
800.500.1500 • Worldwide: 217.540.4200 • FAX: 217.540.4800
www.mamotorworks.com • generalmail@mamotorworks.com
©Mid America Motorworks, Inc. All rights reserved.