

Application: 2014–2017 C7 Corvette

INSTRUCTION SHEET

Part Number




Part Includes

- 1 Stainless Steel Hood Vent Grill
- 1 Packet of Adhesive Promoter
- 1 Small Scotch Pad



Hood Vent Grille, Laser Mesh

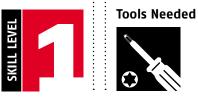

STEP 1.

Open the hood and remove the black plastic vent shroud using a T15 torch driver to remove the two screws securing it to the hood. Once the screws are removed simply unsnap the shroud from the hood.

STEP 2.

Your new grill comes to you flat and will need you to bend the tabs along the sides so that the attachment tap will face towards the center of the grill.

STEP 3.

Set the grill over the hood vent opening so you can bend the tabs to the correct angle and also to get yourself acquainted with just how it is intended to fit. You may need to tweak the shape a little so as to allow the grill to sit nice and flat to the opening eliminating any wave in the grill.


STEP 4.

Before you attach the grill scuff the sides of the hood vent with the small scotch pad provided and then swipe that area with the adhesive promoter provided. Now that you have a good idea of how the grill will mount remove the red liner from the attachment tape and carefully set the grill in place pressing along the tabs to set the grill to the hood vent. Take your time here to make sure the grill attached nice and straight and perfectly centered. The attachment tape is very aggressive and will not allow you to life the grill off and reset it without damaging or warping the grill. So go slow and sure to set it just right.

STEP 5.

Once the grill has been successfully mounted simply snap the vent shroud back in place and reinstall the two screws to finish the installation.



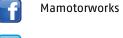

@CorvettePassion

MidAmericaMotorworks

2900 North Third Street, Effingham, IL 62401 800.500.1500 · Worldwide: 217.540.4200 · FAX: 217.540.4800 www.mamotorworks.com · generalmail@mamotorworks.com ©Mid America Motorworks, Inc. All rights reserved.

.....

CorvettePassion