


# C8 FOOTWELL LEDS

## HELPFUL TOOLS


Panel removal tool as in first picture    7mm nut driver or socket    flat blade screw driver    small pic




This tool is helpful as the panel pins on the passenger side are very difficult to remove. Available at most parts stores.

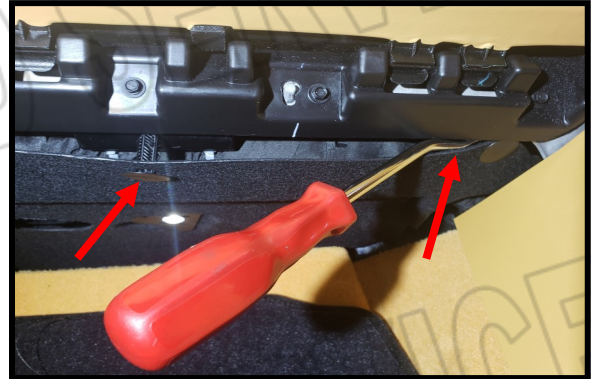


**Passenger side;** Remove the 2 pins holding the under dash panel in place. They can be difficult.

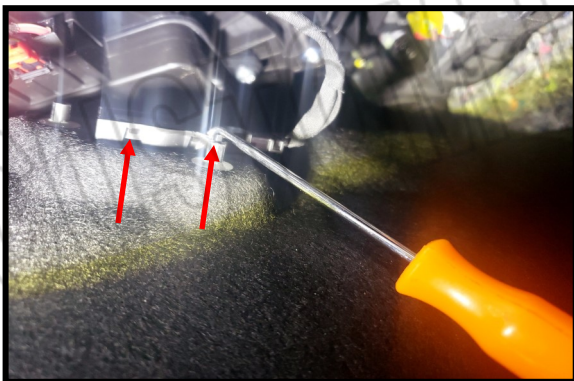

Release the factory light at the 2 points and pry the housing out.

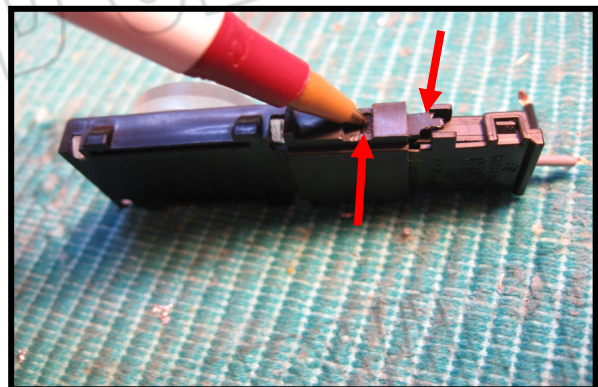

Release the connector from the housing by depressing this tab at either arrow then disconnect the light. You can put the light back in the housing but it won't be used.

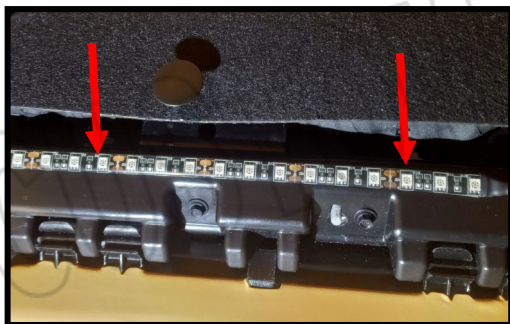

Plug in the led strip. This shows where to mount the strip on the flat area just behind the panel. Wipe the area with the alcohol pad. Pull the adhesive backing off the strip. **Cut the very top off the adhesion promotor. Squeeze the excess fluid back into the packet as you pull it out. Be careful not to spill it. Wipe a thin coat on the area where the strip mounts then place the sponge back into the packet. Fold over the top and clamp it shut so it doesn't dry out. You will need some for the other side and you can also use any excess on other kits you may have purchased.**

The interior light circuit will "time out" after about 15 Minutes so if the leds don't light, close and open the door. You can now hide the wires above the panel and push the pins in to retain the panel in place. Now on to the drivers side.

# DRIVERS SIDE



Remove 2 x 7mm screws and pull panel down. The led strip will mount on these 2 ribs (blue arrows)



Force the light clockwise so it unlatches from the panel. Unplug the connector using the same method as the other side. You can put the factory light back in place or store it. Plug in the led strip. Keep in mind the lights may time out.



Prep the area along the 2 ribs with alcohol wipe and adhesion promotor. We like to slide the side toward the console under this tie strap and secure the rest of the strip along the ribs. Don't take the adhesive backing off the area that gets tucked under the tie strap or it will be difficult to slide the strip in place. Pull the adhesive backing off the rest of the strip and press it in place a couple times.

Once everything is in place and working you can hide the wires above the panel and replace the 2 screws.

That's it! Enjoy the new lights.

