




Application: Corvette 2005–2013 C6

Part Includes
Light Bulb Kit

C6 LED Map Lights



Tools Needed

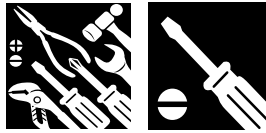

Search: **Lights**

www.mamotorworks.com

STEP 1.

Begin by carefully prying out the map light lens with a small flat screwdriver. Best place to start is near the button.



STEP 2.

Remove the factory bulbs (Careful, they may still be hot). A little trick we like to use is using a small plastic wire tie to slip around the base of the bulb, pull it tight and pull the bulb out. Avoid using anything metal to remove them as you may short out the contacts.



STEP 3.

Insert the new LED bulb. It is polarity sensitive so if it doesn't light, turn it 180 degrees and insert it. Make sure the interior lights haven't "timed out" which they may do after about 15 minutes.



STEP 4.

Re-install the lenses by first engaging the tab (red arrow). Then press the lens back into place. Repeat this procedure for both map lights. That's it! Enjoy the new lights!



Mamotorworks



@CorvettePassion



MidAmericaMotorworks



CorvettePassion

2900 North Third Street, Effingham, IL 62401

800.500.1500 • Worldwide: 217.540.4200 • FAX: 217.540.4800

www.mamotorworks.com • generalmail@mamotorworks.com

©Mid America Motorworks, Inc. All rights reserved.