



Application: Corvette 1963-1967

Part Includes

- 4 - J748 - 5/16" x 3/4" Hex Bolts
- 4 - CLMP 2.0 - 2" Clamps
- 2 - 2" Adjustable Outlets
- 2 - CLMP 2.25 - 2 1/4" Clamps
- 4 - V12772 - 5/16" Flat Washers

Stock Mufflers




Tools Needed



Search: **Exhaust Systems**
www.mamotorworks.com

Illustrated below is the position of hardware.

TIP: After removing old mufflers, install new mufflers loosely bolted/clamped in position. With wire or string, tie mufflers in desired position. When satisfied with position, tighten all bolts/clamps, then remove ties.

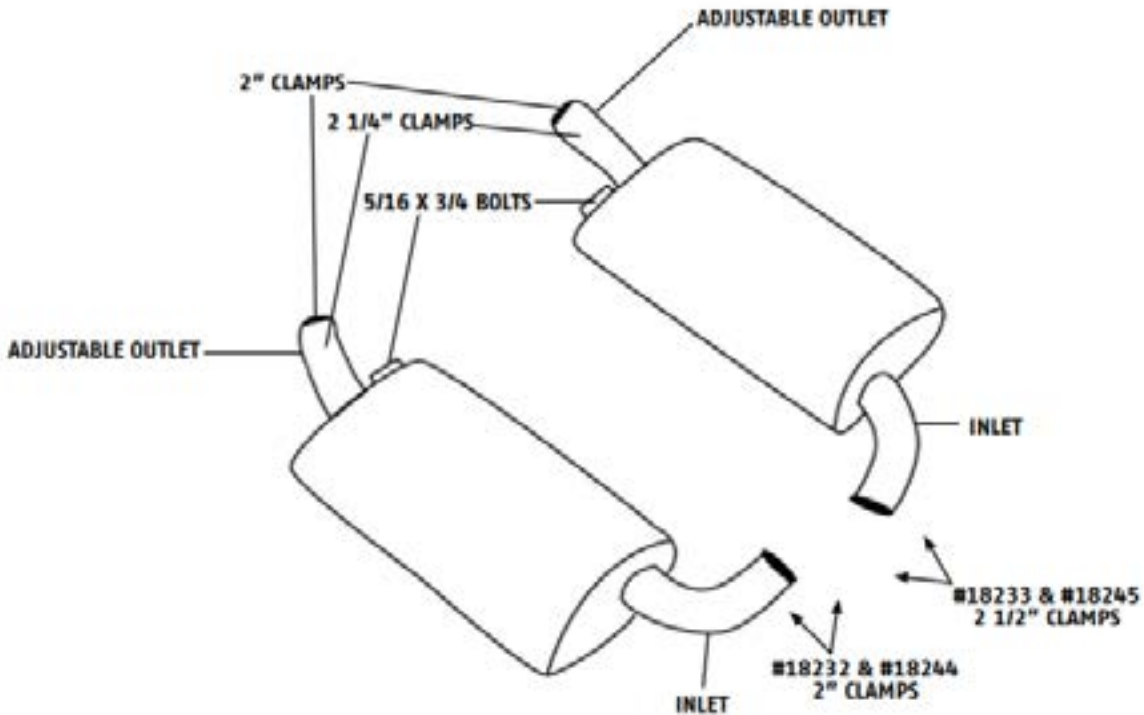

Mamotorworks



@CorvettePassion



MidAmericaMotorworks



CorvettePassion

2900 North Third Street, Effingham, IL 62401
 800.500.1500 • Worldwide: 217.540.4200 • FAX: 217.540.4800
www.mamotorworks.com • generalmail@mamotorworks.com
 ©Mid America Motorworks, Inc. All rights reserved.