



Application: Corvette 1963-1982



Search: *Tools, Restoration & Specialty*
www.mamotorworks.com


Part Includes

1 - Spindle Press

Rear Spindle Removal Press



Tools Needed

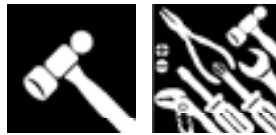

NOTE: PROTECTIVE EYE WEAR MUST BE WORN!

STEP 1.

Unbolt the brake caliper assembly and place it out of the way.

STEP 2.

Unbolt the half shaft. DO NOT REMOVE THE BRAKE LINE.

STEP 3.

Remove the spindle castle nut, flange and washer.

STEP 4.

Screw on the spindle thread protector cap.

STEP 5.

Take the spindle press plate and turn the T-head bracket so it will go through the forks of the spindle support arm without removing the strut rod or shock. Turn the back to the T shape.

STEP 6.

Flip the press plate up and put the 2 seven inch long hex bolts in the caliper mounting bracket.

STEP 7.

Align the press plate perpendicular to the spindle.

STEP 8.

Tighten the press screw into the thread protector cap to approx. 100 Ft. Lbs. Using a hammer, tap the top of the screw. Re-torque the screw and tap again. Repeat this operation until spindle is removed.



Mamotorworks



@CorvettePassion



MidAmericaMotorworks



CorvettePassion

2900 North Third Street, Effingham, IL 62401

800.500.1500 • Worldwide: 217.540.4200 • FAX: 217.540.4800

www.mamotorworks.com • generalmail@mamotorworks.com

©Mid America Motorworks, Inc. All rights reserved.