



Application: 1968-1976

Part Includes

- 2 - Liner Panels
- 8 - Screws
- 4" Rubber Hose

T-Top Headliners



Tools Needed



Search: *Convertible, Removable & T-Tops*
www.mamotorworks.com

NOTE: To ensure proper installation, please fit all parts before drilling, sanding, or painting. Part cannot be returned after drilling, sanding, or painting has occurred.

DIRECTIONS FOR SAFE AND PROPER APPLICATION

STEP 1.

Lay T-top on towel facing down.

STEP 2.

Remove old T-top liner.

STEP 3.

Remove "Velcro" looking round fasteners at corners of the top. (Diagram A)

STEP 4.

Trim the included rubber hose to 1/2 inch lengths for proper installation

STEP 5.

Push screws through liner and put rubber spaces on back side. Do this to the four corners. (Diagram B)

STEP 6.

Lay new liner on T-top and fasten screws. Do not over tighten the screws.



Diagram A

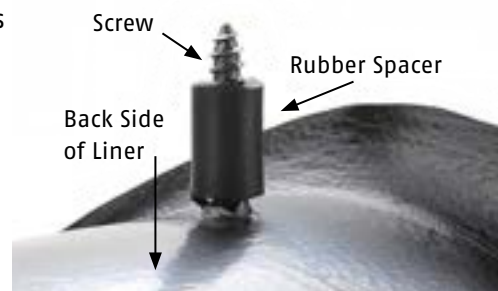


Diagram B



Mamotorworks



@CorvettePassion



MidAmericaMotorworks



CorvettePassion

2900 North Third Street, Effingham, IL 62401
800.500.1500 • Worldwide: 217.540.4200 • FAX: 217.540.4800
www.mamotorworks.com • generalmail@mamotorworks.com
 ©Mid America Motorworks, Inc. All rights reserved.