



Application: 1969-1977



Search: *Interior Trim, Door Panels, Sunvisors*
www.mamotorworks.com


Part Includes

1 - Armrest Repair Kit (2 pcs)

C3 Door Panel Armrest Repair Kit



Tools Needed

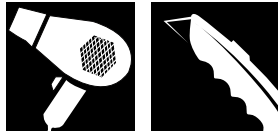

STEP 1

It may be necessary to cut rough edges or loose vinyl of armrest area with a box cutter to provide a smooth area to bond the Armrest Repair Kit Panels.

STEP 2

Test fit product to armrest area of door panel.

STEP 3

Clean armrest area at least twice with rubbing alcohol.

STEP 4

Remove adhesive backing paper from armrest repair and apply to door panel, pressing inward and down on repair panel. Hold in place for a short time or apply heat from a hair dryer or a heat gun to help adhesion.

STEP 5

Product is now installed and ready to use, your elbow will now rest on a comfortable surface and door panel will look much better.

BEFORE



AFTER



Mamotorworks



@CorvettePassion



MidAmericaMotorworks



CorvettePassion

2900 North Third Street, Effingham, IL 62401

800.500.1500 • Worldwide: 217.540.4200 • FAX: 217.540.4800

www.mamotorworks.com • generalmail@mamotorworks.com

©Mid America Motorworks, Inc. All rights reserved.