

Application: 1984–1991

INSTRUCTION SHEET

Part Number

605-500

Part Includes

1 - Component


Aluminized Mufflers



Tools Needed



Illustrated below is the position of system components and hardware. TIP: After removing old mufflers, install new mufflers loosely bolted/clamped into position. When satisfied with position, tighten all bolts/clamps.

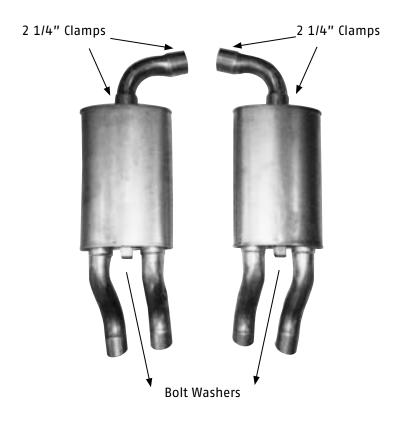





Mamotorworks




@CorvettePassion





MidAmericaMotorworks



2900 North Third Street, Effingham, IL 62401 800.500.1500 · Worldwide: 217.540.4200 · FAX: 217.540.4800 www.mamotorworks.com · generalmail@mamotorworks.com @Mid America Motorworks, Inc. All rights reserved.