

Application: 1984 - 1995 Corvette

INSTRUCTION SHEET

Part Number

601-006

Part Includes

1 - Component

Console Lid Bulb Kit



Tools Needed



STEP 1.

To access the bulb and mercury switch, open the console lid and unsnap the wire cover from the console.

STEP 2.

Pull the wire lead out and unplug the connector.

STEP 3.


Remove the two Phillips screws holding the lens to the console lid.

STEP 4.

Using a pair of needle nose pliers remove the bulb and mercury switch. You may have to use hot glue to reattach the mercury switch to the console lid.

STEP 5.

Plug the wire back in before reinstalling the lens. If the light is not on, check for 12 volts on the orange wire, before and after the mercury switch. If no voltage, check the courtesy fuse or related connections on the circuit.

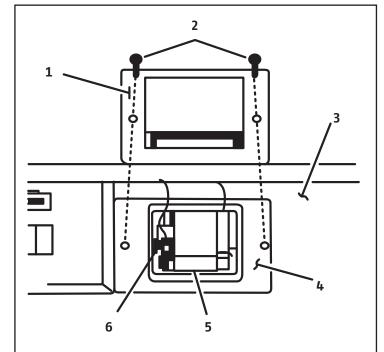

- 1. Console Compartment Lamp Lens/Cover
- 2. Screws
- 3. Console Compartment Door
- 4. Console Compartment Lamp Base Assembly
- 5. Bulb
- 6. Mercury Switch





Mamotorworks



@CorvettePassion





MidAmericaMotorworks



2900 North Third Street, Effingham, IL 62401 800.500.1500 · Worldwide: 217.540.4200 · FAX: 217.540.4800 www.mamotorworks.com · generalmail@mamotorworks.com @Mid America Motorworks, Inc. All rights reserved.